



WMF 1500 S+

USER MANUAL
NORTH AMERICA - ENGLISH

Safety instructions

	WARNING Risk of fire or electric shock. Do not open.	
<p>WARNING, to reduce the risk of fire or electric shock, do not remove cover (or back), no user-serviceable parts inside, repair should be done by authorized service personnel only.</p>		

(33 1453 5000)



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of fire or electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this User Manual.



Do not use the machine if it is not working properly or if it is damaged.



Never alter built-in safety devices.



Ensure that there is always a receptacle under the outlet when dispensing hot beverages and hot steam to avoid scalding.



Do not touch hot machine components.



Never reach into the coffee grinder.



Never reach into the powder hopper.

-  Before cleaning the operating panel, switch off the coffee machine or use the CleanLock function in order to prevent a beverage from being dispensing accidentally.
-  The milk system must be thoroughly cleaned, depending on the equipment included, in order to ensure proper hygiene. The milk hose must be replaced regularly. Never reach under the spouts while milk system rinsing. Ensure that mixer hose is replaced securely because hot liquid may escape.
-  Never reach under the spouts while system cleaning.
-  Do not reach into the bean hopper or the brewing unit opening when the Coffee Machine is switched on to avoid pinching or crushing when handling moving parts.

Congratulations on the purchase of your WMF coffee machine.

The WMF 1500 S+ coffee machine is a fully automatic single-cup machine for espresso, café crème, cappuccino, milk coffee, latte macchiato, milk foam, and hot water. Thanks to the optional "Fresh Filtered Coffee" extension, the WMF 1500 S+ can also dispense freshly filtered coffee. With its optionally available powder hopper, the WMF 1500 S+ can also make hot chocolate with milk or milk foam.



Follow the User Manual



- > Read the User Manual carefully prior to use.
- > Please refer to the User Manual, paying special attention to the safety instructions and Safety chapter.
- > Follow the warning instructions on the coffee machine.
- > Ensure that the staff and all users have access to the User Manual.

CAUTION

Follow the User Manual signs and symbols
▷ page 24

Follow the Safety chapter
▷ starting on page 5



Hazard to life due to electrical shock



- The voltage inside the coffee machine is a hazard to life.
 - > Never open the housing.
 - > Never loosen the screws, and do not remove any housing parts.

WARNING

Follow the Safety chapter
▷ starting on page 5



Conditions for use and installation

- In the event of failure to comply with maintenance information and the specifications in the Technical Data chapter, no liability is accepted for any resultant damage.
 - > Follow the User Manual.
 - > Initial start-up, maintenance and repairs may only be carried out by the WMF Service, using original spare parts.

IMPORTANT

Technical data
▷ starting on page 130

Maintenance
▷ starting on page 116

1 Safety



Misuse

- Failure to follow the safety instructions can result in death or serious injury.
 - > Follow all the safety instructions.
-

 **WARNING**

1.1 General safety instructions

Hazards to the operator

At WMF, safety is one of the most essential product features. The effectiveness of safety devices can only be ensured if the following points are observed:



> Read the User Manual carefully prior to use.



> Do not touch hot machine components.



- > Do not use the coffee machine if it is not working properly or if it is damaged.
- > Use the coffee machine only when it is completely assembled.
- > Built-in safety devices must never be altered.

 **CAUTION**



> User must read the User Manual before operation to avoid any hurts due to wrong operation.



> This device can be used by children of age 8 years or older while under continuous supervision, as well as by persons with reduced physical, sensory, or mental capabilities or lack of experience or knowledge, once they have been instructed in the safe use of the machine and the risks associated with it.



- > Children must not play with the device.
- > Cleaning and user maintenance must not be performed by children.

 **CAUTION**

A coffee machine poses a potential for hazard when correctly used, despite the use of safety devices. Please observe the following instructions when using the coffee machine to prevent injury and health hazards:



Hazard to life due to electrical shock



WARNING



- The voltage inside the coffee machine is a hazard to life.
 - > Never open the housing.
 - > Never loosen the screws, and do not remove any housing parts.
 - > Avoid damage to the power cord. Do not kink or crush it.
 - > Never use a damaged power cord. A damaged power cord must be replaced by the manufacturer or a service representative in order to prevent a hazard.
 - > Never immerse the mains plug in water or other liquids. Never pour water or other liquids over the mains plug. Always keeps the mains plug dry.
 - > Do not unplug the equipment's plug on the rear of the coffee machine until the power cord has been unplugged from the mains.
 - > The coffee machine must be disconnected from the power supply prior to maintenance and repair work. Pull out the plug to do so. The person performing the maintenance or repair must always be able to check, with a clear line of sight, that the power supply has been disconnected.

 **CAUTION**



Burn hazard / scalding hazard



- Hot water and steam may escape from the outlets in the heating-up phase.



- When dispensing beverages and steam, hot liquid comes out of the spouts. The adjacent surfaces and spouts become hot.
 - Hot steam is produced by the SteamJet cup warmer. The cups and adjacent surfaces also get very hot.
- > Do not reach beneath the spouts during the heating-up phase.
 - > When dispensing beverages and steam, do not reach beneath the spouts.
 - > Do not touch the spouts immediately after dispensing.
 - > Always place an appropriate cup under the spout before dispensing a beverage.
-

**Risk of injury**

- Long hair or clothes could become caught in the grinder head and drawn into the coffee machine.
- > Always protect hair with a hairnet.

⚠ CAUTION**Pinching or crushing hazard / risk of injury**

- The coffee machine contains moving parts that can cause finger or hand injury.
- Closing the operating panel can cause a crushing hazard.
- > Always switch off the coffee machine and unplug the mains plug before reaching into the coffee grinder or the opening of the brewing unit.
- > Carefully and gently close the operating panel.
- > Do not reach into the area of the moving spout.

⚠ CAUTION



Health hazard

- > Only use products that are suitable for consumption and for use with the coffee machine.
 - > The powder hopper, bean hopper, and the manual insert may only be filled with materials for the use intended.
-

 **CAUTION**



Slipping hazard



- Fluids can be discharged from the coffee machine if used improperly or if errors occur. These fluids can cause a slipping hazard.
 - Liquid may spill when the bottle of milk cleaning agent is replaced. This can cause a slipping hazard.
 - > Regularly check the coffee machine for leaks, and make sure no water is coming out.
 - > Replace the bottle of milk cleaning agent carefully. If liquid spills, wipe it up immediately.
-

 **CAUTION**



Health hazard / irritation and scalding hazard

 **CAUTION**



- During cleaning, hot cleaning solution and hot water run out of the combi spout and out of the hot water spout.
 - Hot liquids can irritate the skin, and the heat poses a scalding hazard.
 - The drip tray may contain hot liquids.
 - > Never reach under the spouts while cleaning.
 - > Ensure that no one ever drinks the cleaning solution.
 - > Be careful when moving the drip tray.
-



Health hazard

 **CAUTION**

- The milk system cleaner and the cleaning tablets are irritants.
 - > Follow the protective measures on the packaging of the cleaning agents.
 - > Only put in a cleaning tablet when an appropriate message is displayed.
-

1.2 Intended use



Misuse

- If the coffee machine is used other than as intended, this could lead to a risk of injury.
 - > The coffee machine must only be used as intended.
-

WARNING

Guidelines

▷ *page 126*

Technical data

▷ *starting on page 130*

- The WMF 1500 S+ is designed to dispense beverages made with coffee and/or milk and/or powder (such as Choc or Topping).
- The coffee beans, milk, topping, and chocolate powder products must be suitable for processing in a fully automated coffee machine. The products must not be processed after their expiration date.
- This device is intended for industrial and commercial use and should be operated by experts or trained users in stores, offices, restaurants, hotels, or similar places. It can also be used in a domestic environment.
- User must read the User Manual before operation to avoid any hurts due to wrong operation.


Installation location

- The device can be used as a self-service device if it is supervised by trained personnel.
The machine must be set up so as to allow good visual access.
- The device must be placed and levelled on a horizontal, sturdy, water-resistant, and heatproof base.
- The device must not be cleaned using a water jet. The device must be installed where it is protected against water spray.
- The device must not be located on a surface that is sprayed or cleaned with a water hose, steam jet, steam cleaner, or similar devices.
- Do not use the coffee machine outdoors.

Water supply

- 3/8 inch hose connector with water mains tap, and dirt filter with 0.003 in (0.08 mm) mesh size, on site. At least 29 psi (0.2 MPa/2 bar) supply pressure at 0.53 gal/min (2 l/min). Maximum 87 psi (0.6 MPa/6 bar).

Important. If the customer's on-site flow pressure exceeds 87 psi (0.6 MPa/6 bar), then a pressure reducer must absolutely be connected upstream and set to a maximum of 87 psi (0.6 MPa/6 bar).

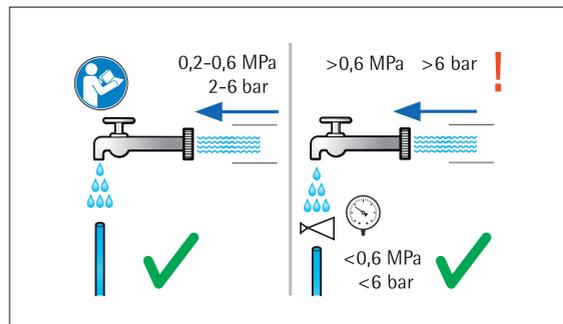

- Maximum inlet temperature 95 °F (35 °C).
- The set of hoses provided with the new coffee machine, the permanent water connection kit, or the new water filter must be used. Do not use the old set of hoses.

Ambient temperature

- Ambient temperature 41 °F to 95 °F (+5 °C to +35 °C)

Usage

- The use of the device is subject to this User Manual. Any other use or use that goes beyond the aforementioned is considered incorrect use. The manufacturer shall not be liable for any damage resulting from this.
- **Under no circumstances may the WMF 1500 S+ be used to dispense and heat liquids other than coffee, hot water (beverages, cleaning) or milk (chilled, pasteurized, homogenized, UHT).**

Hygiene

- The coffee machine must be set up by the operator such that care and maintenance can be performed without hindrance.
- In office / floor kitchen areas or similar self-service set-ups, only staff instructed in operation of the coffee machine should supervise the coffee machine. Trained personnel should carry out care procedures and be available for questions regarding use.

1.3 Conditions for use and installation



Risk of fire and accidents

- > The conditions for use and installation listed in the "Technical Data" chapter must be met.
 - > Before inserting the device plug, ensure that the information on the rating plate matches the mains voltage for the installation.
-

WARNING

Technical data
▷ starting on
page 130



Conditions for use and installation

- > Use the coffee machine only in places that will not freeze.
 - > If the coffee machine has been transported or stored at temperatures below 41 °F (5 °C), then it must rest at room temperature for at least 5 hours before operating.
 - > After a company holiday (several days or weeks) we recommend running the cleaning mode at least twice before reusing the machine.
-

IMPORTANT

Technical data
▷ starting on
page 130
Maintenance
▷ starting on
page 116

Any necessary on-site preparatory work for electricity, water, and drainage connections at the customer's premises is to be arranged by the machine owner / operator.

The work must be carried out by authorized installation technicians in compliance with general, country-specific and local regulations. The WMF Service engineers must only connect the coffee machine to existing prepared connection points. WMF Service is neither authorized nor responsible for carrying out any on-site installation work prior to connection. The device must only be connected and commissioned by WMF Service.

NOTE

The device is to be installed to comply with applicable federal, state or local plumbing codes. This includes sufficient backflow preventers.

1	Safety	5
1.1	General safety instructions	5
1.2	Intended use	12
1.3	Conditions for use and installation	15
2	Introduction	22
2.1	Parts of the coffee machine	22
	"Ready to operate" display	22
	Glossary	25
3	Operation	26
3.1	Operation safety instructions	26
3.2	Other documents	27
3.3	Switch on the coffee machine	28
3.4	Milk or milk foam (optional)	28
	3.4.1 Connect up the milk	28
	3.4.2 Milk or milk foam dispensing	29
3.5	Beverage dispensing	30
	Cancel beverage	30
3.6	Fresh Filtered Coffee – FFC (optional)	30
3.7	Pre-selection pads (optional)	31
3.8	Optional pads	31
3.9	Cup size adjustment	31
3.10	Hot water dispensing	31
3.11	Basic Steam (optional)	32
3.12	SteamJet cup warmer	34
3.13	Height adjustment of the combi spout	35
	Automatic height adjustment (optional)	35
	Cup detection (optional)	35
3.14	Bean hopper / powder hopper	35
3.15	Manual insert, lockable	36
3.16	Grounds container	37
3.17	Grounds disposal through the counter (optional)	37
3.18	Drip tray	38
	3.18.1 Drip tray sensor (optional)	38
3.19	Switch off the coffee machine	39
4	Software	40
4.1	Overview	40
	Ready to operate	40
	Function bar "Ready to operate" display	40
	Main menu functions	41
	Menu control pads	41
	Messages on the display	41
4.2	"Ready to operate" display	42
	4.2.1 Beverage buttons	42
	4.2.2 Function bar	42
	SteamJet pad	42
	"Warm rinse" pad	42
	Nutritional information	42

Table of Contents

	Cup size adjustment	43
	S-M-L pad	43
	Barista pad - coffee strength	43
	Milk system refill	43
	Second type of coffee (decaf)	44
	Steam button	44
	Hot water button	44
4.3	Care	45
	System cleaning	45
	Mixer rinsing	45
	Milk system cleaning	45
	Intensive system cleaning (AutoClean)	46
	FFC filter change	46
	Foamer rinsing	46
	CleanLock	46
	Instructions	47
	Milk system refill (Dynamic Milk)	47
	Settings	47
4.4	Beverages	48
	General information	48
	Cup volume, multiple brewing, and dispensing option	49
	Change recipes	51
	Select coffee grinder	54
	Text, picture, and cup height	54
	Change buttons	56
4.5	Operating options	57
	Operating elements	57
	Button layout	60
	PostSelection	60
	Caffeine-free	61
	Beverage pre-selection	61
	Cancel beverage	61
	Logo	62
4.6	Information	63
	Last brewing cycle	63
	Timer	63
	Service	63
	Care	63
	Water filter and descaling	63
	Journal	63
4.7	Accounting	64
	Counters	64
	Vending machines	64
	External accounting	64
	Free of charge settings	65
4.8	PIN rights	65
	Cleaning PIN	66
	Settings PIN	66
	Accounting PIN	66
	Re-enter PIN	66

4.9	Timer	67
	Time / date	67
	Timer	67
	Timer overview and setting the timer	67
	Delete timer	68
	Daily timer overview	68
	Set timer switching times	68
	AutoClean cleaning cycle	69
	Button layout	69
	Eco mode	70
	Daylight saving time	70
	Time zone	70
4.10	System	71
	Cooler	71
	Quality check (Dynamic Milk)	72
	Progress display	72
	Display and illumination	72
	Display brightness	73
	Reduce brightness automatically	73
	Touch calibration	73
	Display background	73
	Beverages: Font + color	74
	Water filter	74
	Eco mode	75
	Temperature	75
	Antifreeze / transport preparation	76
	Grinding degree setting	76
	Portioner	76
	Bluetooth (optional)	76
	S-M-L Function	77
	Syrup (optional)	77
	Nutritional information	77
	Cup detection (optional)	78
	Digital solutions	81
4.11	Language	81
4.12	Eco mode	82
	Eco mode display	82
4.13	USB	83
	Load recipes	83
	Load beverage symbols	83
	Save recipes	83
	Save recipes as pdf file	83
	Export counters	83
	HACCP export	84
	Data back-up	84
	Load data	84
	Load language	84
	Firmware update	84

Table of Contents

5	Care	85
5.1	Care safety instructions	85
5.2	Cleaning intervals overview	87
5.3	Cleaning programs	88
5.3.1	System cleaning	88
5.3.2	Milk system cleaning	93
5.3.3	Foamer rinsing	94
5.3.4	Foamer rinsing (Dynamic Milk)	94
5.3.5	Mixer rinsing	95
5.3.6	FFC filter change	95
5.3.7	Milk system cleaning overview	96
5.4	Add cleaning agent (AutoClean)	97
	Coffee cleaning granulate	97
	Milk system cleaner	97
5.5	Descaling	98
5.5.1	Descaling coffee machine with constant water connection	100
5.5.2	Descaling coffee machine with constant water connection	101
5.6	Manual cleaning	103
5.6.1	Clean the operating panel (CleanLock)	103
5.6.2	Clean the grounds container (grounds chute, optional)	104
5.6.3	Clean the brewing unit	104
5.6.4	Clean the water tank	107
5.6.5	Clean the drip tray	107
5.6.6	Clean the housing and the cup sensor	108
5.6.7	Clean the milk system manually	108
5.6.8	Clean the mixer	111
5.6.9	Clean the bean hopper	112
5.6.10	Clean the powder hopper	113
6	HACCP cleaning schedule	114
7	Maintenance and descaling	116
7.1	Maintenance	116
7.2	WMF Service	117
8	Messages and instructions	118
8.1	Messages for operation	118
8.2	Error messages and malfunctions	119
8.3	Errors without error message	122
9	Safety and warranty	125
9.1	Hazards to the coffee machine	125
9.2	Directives	126
9.3	Duties of the owner / operator	128
9.4	Warranty claims	129
Appendix: Technical data		130
Technical data for coffee machine		130
Appendix: Accessories and spare parts		134
Index		137

2 Introduction

2.1 Parts of the coffee machine



"Ready to operate" display



Header bar

Function bar

- 1 Bean hopper (up to 2), lockable
- 2 Powder hopper (optional), lockable (Choc or topping, for example)
- 3 Manual insert / tablet insert
- 4 Fresh Filtered Coffee - FFC (optional)
- 5 Touch display for beverage buttons and settings
- 6 Combi spout with integrated milk foamer
- 7 Automatic cup detection (optional)
- 8 Grounds container
- 9 SteamJet cup warmer
- 10 Removable drip tray with drip grid
- 11 Hot water spout / steam outlet (optional)
- 12 Water tank / descaling container (optional)
- 13 Operating panel
- 14 Side illumination
- 15 ON/OFF switch (operating panel open)
- 16 Hopper lock

"Ready to operate" display

- 17 Eco mode
- 18 Menu pad (opens the main menu)
- 19 Beverage buttons
- 20 SteamJet pad
- 21 "Warm rinse" pad
- 22 Barista pad

The pads and buttons available on the display depend on the settings and the machine model.

The functions shown here are examples.

Software ▷ starting on page 40

User Manual Signs and Symbols



Personal injury safety instructions

If the safety instructions are not followed, this could lead to mild to severe injury in case of improper use.



WARNING

Follow the Safety chapter
▷ starting on page 5



Personal injury safety instructions

If the safety instructions are not followed, this could lead to mild injury in case of improper use.



CAUTION

Operation safety instructions
▷ page 26

Care safety instructions
▷ page 85

Follow the Safety chapter
▷ starting on page 5



Electrical shock



Hot steam



Pinching or
crushing hazard



Hot surfaces



Slipping hazard



Notice of property damage

- for the coffee machine
 - for the installation location
- > Always follow the User Manual.
-

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129

Technical data
▷ starting on page 130



Note / tip

- Instructions for safe use and tips for easier operation.
-

NOTE

TIP

3 Operation

3.1 Operation safety instructions



Burn hazard / scalding hazard



- Hot water and steam may escape from the outlets in the heating-up phase.
 - When dispensing beverages and steam, hot liquid comes out of the spouts. The adjacent surfaces and spouts become hot.
 - > Do not reach beneath the spouts during the heating-up phase.
 - > When dispensing beverages and steam, do not reach beneath the spouts.
 - > Do not touch the spouts immediately after dispensing.
 - > Always place an appropriate cup under the spout before dispensing a beverage.
-



CAUTION

Follow the Safety chapter
▷ starting on page 5



Health hazard

- > Only use products that are suitable for consumption and for use with the coffee machine.
 - > The powder hopper, bean hopper, and the manual insert may only be filled with materials for the use intended.
-



CAUTION

Follow the Safety chapter
▷ starting on page 5



Pinching or crushing hazard / risk of injury



- Be careful when fitting the FFC cover: risk of pinching.
- > Screw on the FFC cover carefully.

 **CAUTION**



Burn hazard / scalding hazard



- Hot liquid may escape while the "Fresh Filtered Coffee" is dispensing. The adjacent surfaces become hot.



- > Do not touch the FFC capsule while beverages are being dispensed.
- > Refrain from touching the FFC capsule immediately after dispensing.

 **CAUTION**

*Follow the Safety chapter
▷ starting on page 5*



Pinching or crushing hazard / risk of injury



- The coffee machine contains moving parts that can cause finger or hand injury.
- > Do not reach into the area of the moving spout.
- > Always switch off the coffee machine and unplug the mains plug before reaching into the coffee grinder or the opening of the brewing unit.

 **CAUTION**

3.2 Other documents

With syrup station option

- Follow the User Manual for the syrup station.
- Follow the Cleaning instructions for the syrup station.

3.3 Switch on the coffee machine

- * Slide the operating panel upward
The ON/OFF switch is on the right side, behind the operating panel.
- * Press the ON/OFF switch
*Coffee machine switches on and heats up.
An automatic warm rinsing starts.
When the coffee machine is ready to dispense beverages, the "Ready to operate" display appears.*

The coffee machine can be switched on and off using the timer.



PIN access control

▷ PIN rights
page 65

Set timer switching times
▷ Timer
page 67

3.4 Milk or milk foam (optional)

3.4.1 Connect up the milk

Basic Milk

Use a suitable milk nozzle on the combi spout.

Colour	Milk temperature
• green	very cold milk (up to 46.4 °F/8 °C)
• white	chilled milk (46.4 °F to 60.8 °F/8 to 16 °C)
• caramel	non-chilled milk (above 60.8 °F/16 °C)

- * Open the milk packaging and place it on the left next to the coffee machine
- * Insert the milk hose with the beige milk nozzle into the milk pack

The hose must reach down to the floor of the milk package.

The hose must not be under tension or bent when adjusting the height of the combi spout.




Cooler version



With WMF milk cooler, WMF Cup&Cool, Easy Milk, Dynamic Milk (optional)

Basic Milk

- * Insert the milk nozzle for chilled milk into the milk connection on the combi spout
- * Remove the milk container from the cooler
- * Push the milk container lid back
- * Pour milk into the milk container
- * Place the lid back on the container
- * Insert the adapter on the milk hose into the connection in the milk container lid
- * Push the milk container back in carefully

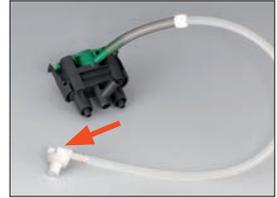

Milk container adapter



Milk container

3.4.2 Milk or milk foam dispensing

- * Place a cup of the appropriate size beneath the combi spout
- * Touch the beverage button assigned to milk or milk foam

The beverage is dispensed according to the recipe settings (dispensing option, milk foam quality, etc.)

Dispensing option

▷ Cup volume

page 49

Start-Stop or metered

3.5 Beverage dispensing

Touching the beverage buttons triggers dispensing of the beverage selected.

- Lit up button = ready to dispense
- Unlit button / red triangle in the header button disabled / bar

- * Place a cup of the appropriate size beneath the combi spout
- * Touch the desired beverage button

Cancel beverage

- * Touch the beverage button again

3.6 Fresh Filtered Coffee - FFC (optional)

Our new "Fresh Filtered Coffee" feature provides dispensing of filtered, freshly-brewed coffee. The freshly-brewed coffee is free from oil and sediment thanks to this additional filter system. Practically all coffee brews (Espresso or Café Crème) can be dispensed via this filter.



Beverage selection

*Button layout
▷ Operating options
page 60*



3.7 Pre-selection pads (optional)

Depending on the version, preselection buttons such as a "Second type of coffee" may be available on the display.

These are pre-selection pads that define the desired pre-selection prior to beverage selection using the beverage buttons.



Example:
Second type of coffee button
▷ page 44

3.8 Optional pads

There are optional pads, such as the Barista pad shown here, that can be shown on the function line of the display.

Another example is the S-M-L pad.

The S-M-L cup volumes need to be set for beverages in order for them to be available.

The cup volume "S" or "L" can then be selected prior to selecting a beverage, and then only those beverage buttons that have that size available will be illuminated.

M = size of the beverage set, no pre-selection

S = approx. 25% less than M

L = approx. 25% more than M

Activate and set up optional pads
▷ Operating options
page 57



Example:
Barista pad



Example:
S-M-L pad

3.9 Cup size adjustment

Free selection of the cup volume is optionally available. Depending on the setting, the cup volume can be adjusted in post-select mode after the beverage has been selected.



3.10 Hot water dispensing

- * Place a cup of the appropriate size beneath the hot water spout
- * Touch the hot water button

Dispensing occurs according to the dispensing option.



3.11 Basic Steam (optional)



Burn hazard / scalding hazard



- Hot water and steam may escape from the outlets in the heating-up phase.
- When dispensing beverages and steam, hot liquid comes out of the spouts. The adjacent surfaces and spouts become hot.



- > Do not reach beneath the spouts during the heating-up phase.
 - > When dispensing beverages and steam, do not reach beneath the spouts.
 - > Do not touch the spouts immediately after dispensing.
 - > Always place an appropriate cup under the spout before dispensing a beverage.
-



CAUTION

*Follow the Safety chapter
▷ starting on page 5*

* Press the steam button

Steam is dispensed for as long as the steam button is held.

- Steam warms beverages
- Steam manually foams milk

Warm beverages

- * Use as tall and slim a Cromargan® jug as possible, with handle
 - * Fill jug to no more than half way
 - * Immerse steam nozzle deep into the jug
 - * Press and hold steam button until desired temperature is reached
 - * Release steam button
 - * Swing steam outlet over to the drip tray
 - * Briefly press the steam button
- Residue in the steam outlet tube is rinsed.*
- * Wipe the steam outlet with a damp cloth

*A Cromargan® jug, such as
WMF order number 03 9090 0030
or 03 9090 0050*

Foam milk



> Do not overheat milk when foaming, otherwise milk foam volume decreases.

TIP

- * Use as tall and slim a Cromargan® jug as possible, with handle
 - * Fill jug to no more than half way
 - * Immerse steam nozzle into jug to just under the surface
 - * Press and hold steam button whilst rotating jug in a clockwise direction
- A thick creamy milk foam results.*
- * Release steam button
 - * Swing steam outlet over to the drip tray
 - * Briefly press the steam button
- Residue in the steam outlet tube is rinsed.*
- * Wipe the steam outlet with a damp cloth

3.12 SteamJet cup warmer



Burn hazard / scalding hazard



- Hot steam is produced by the SteamJet cup warmer. The cups and adjacent surfaces also get very hot.



- > Use heat-resistant cups.
 - > Always place a cup upside-down over the cup warmer before dispensing steam.
 - > Do not touch the adjacent surfaces immediately after dispensing.
 - > Do not touch the spouts immediately after dispensing.
 - > Never use the SteamJet function without the drip grid in place or without the cup warmer insert.
-



CAUTION

- Follow the Safety chapter
▷ starting on page 5
- Clean drip tray daily
- Care
▷ starting on page 85



Health hazard / hygiene

- The SteamJet function is intended for warming the cup and is not intended to be used for cleaning.
 - > Always use freshly washed cups when warming cups.
-



CAUTION

- Follow the Safety chapter
▷ starting on page 5

The SteamJet cup warmer can use steam to warm up cups.

- * Place a cup on the cup warmer with the opening facing downward
- * Touch the  pad

Hot steam slowly flows into the cup from below. The jet of steam stays on for the time set in the settings.

- * Touch the SteamJet button again
- The steam jet stops immediately.*



- SteamJet pad active / inactive
▷ Operating options
page 58

3.13 Height adjustment of the combi spout

The combi spout is height adjustable.

- ✱ Take hold of the spout on the clip from the front and push to the desired height

Clearance height: 2.76 in–6.89 in (70–175 mm)



Automatic height adjustment (optional)

The cup height is saved with the beverage for automatic height adjustment (only for Dynamic Milk or in the self-service package). Prior to beverage dispensing, the combi spout automatically moves to the saved height.

Clearance height: to 6.89 in (175 mm)

Cup height
▷ page 54

Cup detection (optional)

Machines with optional cup detection can be operated in three different modes, depending on the setting.

- Presence detection
- Office - moves to cup height
- Size preselection

Cup detection
▷ System
page 78

3.14 Bean hopper / powder hopper lockable

If possible, refill product hoppers in advance.

Fill the hoppers no more than the amount needed for one day, in order to maintain the freshness of the products.



- Foreign objects can damage the grinders. Such damage is not covered under the warranty.
 - > Ensure that no foreign objects land in the coffee bean hopper.
 - > Do not overfill the powder hopper.
 - > Do not press down and compact the powder.

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129

3.15 Manual insert, lockable

The manual insert is located in the center of the coffee machine cover.

Manual insert is used

- When using additional coffee types, such as decaffeinated coffee
- For coffee sampling
- For inserting cleaning tablets



- Add ground coffee or cleaning tablet only after the display message.
- Use only ground coffee in the manual insert.
- Do not use water-soluble powdered coffee.
- Do not use coffee that is ground too finely.

Ground coffee prepared using the manual insert

- * Open manual insert lid
- * Insert ground coffee (maximum 0.53 oz/15 g)
- * Close manual insert lid
- * Touch the desired beverage button



Tablet insert

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129



Manual insert

3.16 Grounds container

The grounds container receives the used coffee grounds. It has enough capacity to store coffee grounds from approx. 50 brewing cycles.

The display shows a message as soon as the grounds container needs to be emptied.

Beverage dispensing is blocked for as long as the grounds container is removed.

- * Slide the combi spout upward
- * Remove grounds container
- * Empty and replace grounds container
- * Confirm process on the display



- Replacing without emptying will result in the coffee grounds container being overfilled. The coffee machine will be soiled. This may cause subsequent damage to the machine.
 - > Always empty the grounds container before replacing.
 - > If grounds container cannot be replaced, check chute for coffee residue and remove.



Clean the grounds container
 ▷ *Manual cleaning*
 page 104

IMPORTANT

Follow the Warranty chapter
 ▷ *starting on page 129*

3.17 Grounds disposal through the counter (optional)

The coffee machine can be fitted with grounds disposal through the counter. In this case, both the grounds container and the coffee machine base have an opening that passes through the on-site counter on which the machine is placed. The spent coffee grounds are collected in a separate container under the counter.

Important

Clean grounds chute daily
 ▷ *Manual cleaning*
 page 104

3.18 Drip tray



Scalding hazard

- The drip tray may contain hot liquids.
 - > Be careful when moving the drip tray.
 - > Replace carefully so that no water accidentally drips down.
-



CAUTION

- Follow the Safety chapter*
- ▷ starting on page 5
- Clean drip tray daily*
- Care*
- ▷ starting on page 85



On coffee machines with a drain connection the drip tray may also be removed (e.g. for cleaning).

NOTE

For coffee machines without a drain connection, the drip tray must be emptied regularly.

- * Remove the drip tray carefully, empty it, and then replace the drip tray



3.18.1 Drip tray sensor (optional)

If the machine is equipped with a drip tray sensor, then the coffee machine will indicate on the display when the maximum fill level is reached.

- * After the display message appears, remove the drip tray carefully, empty it, and then reinsert the drip tray

3.19 Switch off the coffee machine



Take care to work hygienically

- Germs that are hazardous to health can grow in the coffee machine.
- > Perform daily cleaning before switching off the coffee machine.



Follow the manual

- If this is not followed, the liability is invalidated in the event of any resultant damage.

* Slide the operating panel upward

The ON/OFF switch is on the right side, behind the operating panel.

* Press the ON/OFF switch briefly until a signal sounds

The coffee machine then switches off.

* Disconnect mains plug

* Turn off main water supply tap

CAUTION

Follow the Safety chapter
▷ starting on page 5

Clean the coffee machine as shown
in the manual.

Care
▷ starting on page 85

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129



PIN access control
▷ PIN rights
page 65

4 Software



- When setting beverages, the same safety instructions apply as for operating the coffee machine.
- > Follow all operation safety instructions.

CAUTION

Operation safety instructions
 ▷ page 26

4.1 Overview

Ready to operate

page 42



Button layout
 ▷ Operating options
 page 60

The pads and buttons available on the display depend on the settings and the machine model.

Function bar "Ready to operate" display

page 42

	SteamJet cup warmer		Eco mode (active)
	Beverage size (S-M-L)		Warm rinsing
	Steam button		Barista (coffee strength)
	Second type of coffee (decaf)		Hot water
	Milk system refill		Cup size adjustment
	Nutritional information		

Main menu functions

starting on page 45



Care
page 45



Beverages
page 48



Operating options
page 57



Information
page 63



Accounting
page 64



PIN rights
page 65



Timer
page 67



System
page 71



Language
page 81



Eco mode
page 82



USB
page 83

Menu control pads



Main menu / back



Confirm value / setting



PIN entry



Delete value / setting



Next / start



Preparation test



Load settings



Back



Save settings



Show keyboard

Messages on the display



Event and error message



Milk temperature display
(optional)

4.2 "Ready to operate" display

The display shown when "Ready to operate" depends on the individual settings and options of the coffee machine.

4.2.1 Beverage buttons

All beverage buttons that are ready to dispense are illuminated.

Depending on the button layout selected, a horizontal swipe on the display can bring up additional beverages. Beverage dispensing begins once the desired beverage button is touched.



Example: Cappuccino button
Button layout
▷ *Operating options*
page 60

4.2.2 Function bar

SteamJet pad

For heating cups.



SteamJet pad active / inactive
▷ *Operating options*
page 58

"Warm rinse" pad

* Touch the "Warm rinse" pad

A rinse of the pipes with hot water starts. The water warms the brewing system and guarantees an optimum coffee temperature.

Recommended after a longer brewing pause, especially before dispensing a cup of espresso.



"Warm rinse" pad active / inactive
▷ *Operating options*
page 58

Nutritional information

Displays ingredients and nutritional information for each beverage.



Nutritional information
▷ *Operating options*
page 58

Cup size adjustment

For selecting beverage size for the next beverage.



Cup size adjustment
 ▷ Operating options
 page 59

S-M-L pad

For pre-selecting beverage sizes. The beverages must be set up accordingly beforehand.



S-M-L
 ▷ Software
 ▷ System
 page 77

Barista pad – coffee strength

	Display	Coffee strength
without touching	2 beans	normal, as per setting
touch 1x	3 beans	15% stronger than the setting *
touch 2x	1 bean	15% weaker than the setting *

* Maximum quantity of ground coffee 0.53 oz (15 g) per brewing cycle

The coffee strength will be altered for the next brewing cycle only.



Barista pad active / inactive
 ▷ Operating options
 page 57

Milk system refill

For automatic "Milk system refill".



Milk system refill
 ▷ Operating options
 page 60

Second type of coffee (decaf)

- * First of all, assign "Decaffeinated" to a grinder in the machine data
- * Under operating options, select "Decaffeinated"
A bean symbol with a line through it is displayed in the function bar.
- * Tap the symbol before selecting a beverage
The beverage is then prepared from the beans in the decaffeinated coffee grinder.



Second type of coffee
▷ Operating options
page 61

Steam button

The steam button is used to dispense hot steam for warming beverages.
Milk can be foamed by means of the steam button.




Hot water button

Hot water button for hot water dispensing.
A beverage button can also be assigned for hot water.



4.3 Care

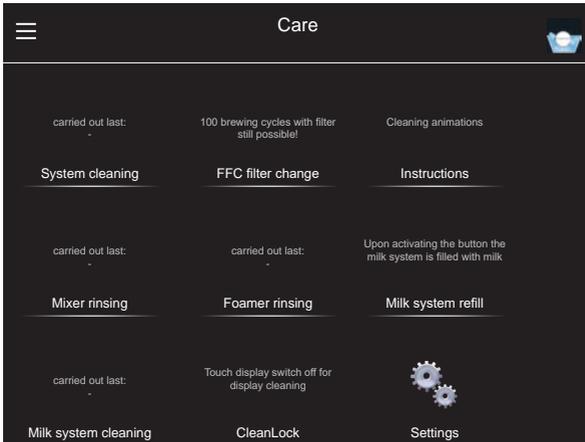

Menu control pads

▷ Overview
page 41

Care

 
▷ starting on page 85

HACCP cleaning schedule

▷ starting on page 114

System cleaning

With switch off or without switch off the coffee machine after system cleaning.



System cleaning

▷ Care

starting on page 88

Mixer rinsing

Mixer rinsing is an intermediate cleaning of the mixer.




Mixer rinsing

▷ Care

page 95

Milk system cleaning

 Milk system cleaning can be started separately. This makes sense if there are longer periods between dispensing milk beverages. The milk system cleaning program cleans the milk system.



Milk system cleaning

▷ Care

page 96

Intensive system cleaning (AutoClean)

This is a system cleaning that includes the milk hose. Can be used with the options "Switch off" or "Do not switch off" once system cleaning is complete. Recommended if operations are interrupted for longer than one day.

FFC filter change

Replace the filter after 100 brewing cycles/72 hours.

* Touch **FFC filter change**

The display-guided instructions are launched.

* Follow the instructions on the display

This pad can also be used to indicate how many more beverages can be dispensed with the current filter and when to next perform system cleaning with FFC.

Foamer rinsing

Foamer rinsing is an intermediate cleaning process for the milk foamer.

CleanLock

* Touch **CleanLock**

A 15-second countdown starts.

The touch display can now be cleaned.

The touch display is activated again 15 seconds after the last time it was touched.



Intensive system cleaning



FFC filter change

FFC filter change

▷ Care

page 95



Foamer rinsing

Foamer rinsing

▷ Care

page 94



CleanLock

Clean the operating panel

▷ Care

starting on page 103

Instructions

Animated instructions about the available cleaning programs and for installing and removing the mixer and combi spout for cleaning.


Instructions

Cleaning intervals overview
▷ Care
page 87

Milk system refill (Dynamic Milk)

This function fills the milk system for dispensing cold beverages.

* Touch **Milk system refill**


Milk system refill

Settings


Settings

Switch off rinsing

Options: • active • inactive

Default value: active

active When the coffee machine is switched off, the switch off rinsing must be run if milk beverages have been dispensed since the last time the machine was cleaned.

Preparing the milk system after cleaning

Options: • active • inactive

Default value: inactive

active After the milk system cleaning cycle, the machine shuts down normally. If this function is activated, the user can replace and connect the milk container up to 15 minutes after cleaning. The coffee machine is then ready to run again.

4.4 Beverages



General information

Dispensing test

For many beverage settings, it is possible to start a dispensing test with the new settings before the recipe is saved.

- * Modify the settings as desired
- * Touch the "Dispensing test" pad
The beverage is dispensed using the newly changed values.
- * If the beverage is as desired, touch the Save symbol
The recipe is saved.



Example: Cappuccino button

Save recipes

The modified recipe is saved.



Load recipes

A saved recipe is loaded to a beverage button here.

- * Touch a beverage button
- * Touch the "Load recipes" pad
A submenu opens.
- * Mark the desired recipe
- * Touch the "Save recipes" pad
The beverage button is assigned to the newly selected recipe.



Cup volume, multiple brewing, and dispensing option



Cup volume

Set the desired cup volume. The recipe is adjusted accordingly.

100% indicates the previously saved value.

S-M-L Function

The S-M-L function is activated in the menu "System". The cup volume can also be set to a different general level for all beverages using the operating options. For individual beverages that deviate from the standard, the S-M-L quantity can be changed under cup volume.

Each size can also be individually set to active or inactive. Inactive means that the size no longer appears as a selection for the individual beverage.

Activate S-M-L and make a change for all beverages

- ▷ Software
- ▷ System
- page 77

Optional pads

- ▷ Operation
- page 31

Cup volume S-M-L

The recipes for the sizes S and L are generated.

M is as set.

Default value:

S = 25% less than the setting.

L = 25% more than the setting.

	S	M	L
	72	97	122
	73	98	123
	74	99	124
%	75	100	125
	76	101	126
	77	102	127
	78	103	128
	<input checked="" type="checkbox"/> S-active	<input checked="" type="checkbox"/> Active	<input type="checkbox"/> L-active

Change S-M-L for individual beverages

- ▷ Cup volume

Multiple brewing

The beverage is brewed several times, as set. Up to 12 times the set quantity can be dispensed with one push of a button.

Available for beverages with coffee and with milk mixtures, as well as for hot water with the "metered" dispensing option.

Dispensing option

- **Start-Stop**

The dispensing runs until the set volume is reached.

The dispensing can be stopped sooner by touching the button again.

- **Start-Stop-Freeflow**

A brief press of a button starts Start-Stop dispensing.

A longer press of the button, for more than 1 second, starts freeflow dispensing.

- **Freeflow**

The beverage or steam is output for as long as the button is pressed and held.

- **Metered**

The set volume is dispensed. The dispensing option is available for milk, foam, and hot water.

The dispensing option can be set for hot water, milk, and milk foam.

Change recipes



Menu control pads
▷ Overview
page 41



Current recipe composition

The additions in the recipe are displayed here. The preparation order is from left to right. Additions that are above or below each other are processed at the same time. The software indicates whether desired options are not technically possible.

Inventory of factory additions

The additions that can be used for the recipe are shown here.
* Touch the desired addition and then touch the desired position in the recipe composition again
The addition is immediately inserted at the desired position.

Delete addition

Delete a marked addition from the current recipe composition.



Change addition

✳ Mark the addition and touch the symbol "Change addition"

The "Change addition" menu opens.

The setting options for the selected addition are displayed.

The saved and current data are displayed.



The current values



The values saved by Service



The factory values

Ground coffee quantity

Enter in grams (g)



Water quantity / milk quantity

Enter in milliliters (ml)



FFC

Set whether to direct the brewed coffee through the filter or not.



Dynamic Milk foam quality levels

Coffee machines with Dynamic Milk can use different milk foam quality levels for each beverage.

It is possible to combine several milk foam quality levels in one beverage.

- Compact** Firm milk foam. Recommended for cappuccinos with a brown edge and for beverages where the appearance of the milk foam is important, along with balanced milk flavor.
- Fluid** Very fine milk foam. Recommended for cappuccinos with balanced and very distinct milk flavor. Optimal blending of coffee and milk.
- Creamy** Milk foam with a shiny surface. Recommended for milk beverages with balanced milk flavor and a good blend of coffee and milk.
- Fluffy** Fluffy, light milk foam with a somewhat coarser bubble structure and balanced milk flavor.

Coffee quality

The quality levels influence the coffee brewing cycle. The higher the quality level, the more intensive the release of the flavor and aromatic substances in the coffee.



Quality levels


- 1 After pressing, space is provided for the ground coffee to swell.
- 2 After pressing, the coffee is brewed immediately.
- 3 After pressing, a pre-infusion occurs.
- 4 After pressing and a pre-infusion, a second wet pressing occurs.
- 5 Same as for Quality 4, but with stronger wet pressing.
- 6 Same as for Quality 5, but with stronger wet pressing.
- 7 Same as for Quality 6, but with longer wet pressing.

Note.

If very finely ground coffee is used with a small amount of brewing water, a high quality level can cause a brewing water flow error.

Select coffee grinder

A full portion of coffee to be ground corresponds to 10. The total amount can be produced cumulatively by different grinders. This means that a variety of individual recipes are possible.

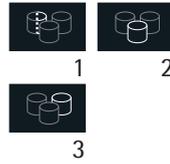

Text, picture, and cup height



Menu control pads

▷ Overview
page 41

The "Detect cup" button is displayed only if "Presence detection" is active.

▷ Presence detection with cup sensor
▷ page 55

Text and picture

The beverage name and photo of a beverage button are adjusted here.

* Activate the keyboard by touching the keyboard pad

Load custom beverage pictures

▷ USB
page 83

Note

A note about the beverage can be saved here.

Set the cup height manually

The cup height for the beverage is selected using the setting wheel.

- * Use the setting wheel to adjust the height
- * On the right side, touch the desired cup symbol to be assigned to this height

The value is assigned to the cup symbol.

For size "S" and "L" beverages, the size must be selected prior to selecting the beverage button.

Presence detection using the cup sensor Cup detection (optional)

The "Detect presence" function causes the **Detect cup** button to be displayed.

- * Place a cup under the spout
- * Touch **Detect cup**

The cup is detected.

The setting for the detected cup height is saved and shown on the setting wheel on the display.

When set up this way, with active presence detection, the spout will move to the height saved for the beverage when the beverage is selected.

Size preselection with cup sensor

The sensor detects the cup height and enables the beverage if the detected height matches the saved value.

The size can be selected by the cup sensor only in "Size preselection" mode.

▷ page 78

Cup height tolerance

*▷ System ▷ Cup detection
page 78*

Use configured cup heights S-M-L

If this button is active, then the cup heights are set in the system menu.

If this function is active, the height can no longer be adjusted manually. The setting wheel is no longer displayed.

*S-M-L must be active. Make cup settings under
▷ System ▷ Cup detection
page 78*

Change buttons

The positions of two beverage buttons are swapped here.

- * Touch a beverage button
- * Touch the "Change buttons" pad
- * Touch the beverage button that is to be swapped



4.5 Operating options



Operating elements

Operating elements

SB mode (self-service)

For self-service mode, a few functions can be switched to be inactive.

These functions and their pads are not displayed in the inactive state.

Options: • active • inactive

Default value: inactive

SB mode active means that the following settings are set at the same time.

- Barista pad: inactive
- "Warm rinse" pad: inactive
- Nutritional information: active
- Menu pad: inactive
- SteamJet: inactive
- Error message: inactive
- Cup size adjustment: inactive
- Language pre-selection: active
- Milk system refill: inactive
- Beverage pre-selection: inactive
- Cancel beverage: inactive

Barista pad

Options: • active • inactive

Default value: active

active The pad is displayed when ready to operate.

Barista pad
page 57

"Warm rinse" pad
page 58

Nutritional information
page 58

Menu pad
page 58

SteamJet
page 58

Error message
page 59

Cup size adjustment
page 59

Language pre-selection
page 59

Milk system refill
page 60

Beverage pre-selection
page 61

Cancel beverage
page 61

“Warm rinse” pad

Options: • active • inactive

Default value: active

active The pad is displayed when ready to operate.

Nutritional information

Displays ingredients and nutritional information for each beverage.

Enter nutritional information
▷ System
▷ Nutritional information
page 77

Options: • active • inactive

Default value: inactive

Menu pad

Options: • active • inactive

Default value: active

active The menu pad reacts immediately when the pad is touched.

inactive Touching the empty pad twice calls up the main menu.

SteamJet

Options: • active • inactive

Default value: inactive

active The pad is displayed when ready to operate.

Error message

The error is displayed in various colors in the header bar on the display.

Options: • active • inactive

Default value: active

active The errors are shown on the display as a text message.

Cup size adjustment

The open selection of cup volume can be activated in the operating options.

The cup volume can be adjusted to the cup size used prior to selecting the beverage.

Options: • active • inactive

Default value: inactive

Sliding the cup on the controller to the right increases the cup volume, and sliding left reduces it.

The cup volume is indicated in percent.

Controller in the center 100% as set

Controller all the way left 50% less

Controller all the way right 50% more



This function cannot be used at the same time as the active S-M-L preselection.

Language pre-selection

This setting determines whether languages and flags pre-selection can be set from the beverage settings.

"Language pre-selection" can be activated here, or by selecting the "Self-service+Flags" button layout.

Options: • active • inactive

Default value: inactive

Button layout "Self-service+Flags"
 ▷ *Button layout*
 page 60

Milk system refill

This function fills the milk system. "Milk system refill" can be activated here.

Milk system refill
▷ Care
page 47

Options: • active • inactive

Default value: inactive

active The errors are shown on the display as a text message.

Button layout

Various standard button layouts are saved and can be selected here.



PostSelection

Options: • active • inactive

Default value: inactive

active The type of coffee and the size of the beverage are requested after the beverage has been selected.

The names of the types of coffee and the sizes can be modified. (Type of coffee and S-M-L). The displays and options will vary, depending on the model.

- Size 1, 2 and 3
- Portioner 1, 2, and 3
- Milk type
- Syrup 1, 2, 3, and 4 (optional)



Options which are needed by the post-selection function are enabled in the System menu.

System
▷ starting on page 71

For self-service mode, a few functions can be switched to be inactive.

The functions and their pads are not displayed in the inactive state.

Caffeine-free

Options: • active • inactive

Default value: inactive



Caffeine-free

Decaf factor

The value for the Decaf factor is entered here. Ground coffee quantity for Decaf (decaffeinated coffee) is set by percentage for the ground coffee quantity set in the recipe. This setting applies to all coffee beverages with pre-selected "Decaf".

Setting range: -25% to 15%

Default value: 10%

For a Decaf factor of 15%, Café Crème is brewed with 15% more ground coffee, for example, when prepared using the Decaf function.

Beverage pre-selection

Options: • active • inactive

Default value: inactive

active Previously selected beverages are dispensed without an additional button touch. The header bar displays, "Beverage pre-selection active".



Beverage pre-selection

Cancel beverage

Options: • active • inactive

Default value: inactive

active Beverage dispensing can be interrupted by touching the beverage button again.

Logo



Manufacturer's logo

Options: • active • inactive

Default value: active

active The manufacturer's logo is shown at the top right of the "Ready to operate" display.

Customer's logo

Options: • active • inactive

Default value: inactive

active When the option is set to "active" and a customer's logo has been downloaded, the customer's logo is shown at the center of the header bar when "Ready to operate". When the vending devices are connected it shows the customer's logo. In this case, both logos cannot be displayed.

Load customer's logo

Insert the USB stick containing the customer's logo.
Load the customer's logo.

Size of customer's logo

The logo must not be greater than 80 pixels high.
Larger logos will be scaled to this size automatically.

 
4.6 Information

The info menu has the following selection options, as described below.



Last brewing cycle

Information about the last brewing cycle.



Timer

The weekly overview of the timer opens. All switch on and switch off times are displayed in this overview.



Service

Contact data for WMF Service.
Serial number of the coffee machine.



 
Care

The last cleaning and care actions that run via coffee machine programs are displayed here.



Water filter and descaling

Information on the remaining capacity of the water filter and the time of the next descaling.




Journal

Journal of events and errors during operation and cleaning of the coffee machine.



4.7 Accounting

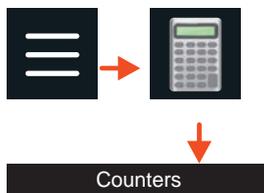

Counters

The counters for the individual dispensed beverages and the totals of the beverages are displayed here. A journal can be read out via the USB port.

Accounting				
Counters				
Beverage	1	2	3	4
2 Espresso M...	2	2	2	2
Espresso	1	1	1	1

Standard setting

Counters 1 through 4 = continuous counters

 The individual counters can be reset manually, independently of each other. (For example counter 1 = daily, counters 2 = weekly, etc.)

TIP

Vending machines

See vending machines User Manual.

External accounting

See the waiter accounting instructions.

Free of charge settings

The free settings are available, along with optional accounting units.



Free of charge settings

All free of charge

Options: • active • inactive

Default value: inactive

Beverage free of charge

Options: • active • inactive

Default value: inactive

Message display

When "All free of charge" is set to active, a text can be saved here. (e.g., "Free of charge") The text is displayed in the header bar.

Display beverage buttons

When "All free of charge" is set to active, a text for the beverage button can be saved here.

4.8 PIN rights

One PIN can be assigned for each of the areas listed below.

- Cleaning
- Setting
- Accounting



The PINs are hierarchical.

This means, for example: the settings PIN simultaneously grants all rights for the cleaning PIN, but not the rights for the accounting PIN.

If no PIN is assigned, then the area is accessible without a PIN. If a PIN has been assigned for a particular level, no access will be granted without a PIN.

Cleaning PIN

On entering the valid PIN, access granted to:

 Care



Settings PIN

On entering the valid PIN, access granted to:

 Care	 Timer
 Beverages	 System
 Operating options	 Language
 Accounting (without "delete")	 USB



Accounting PIN

On entering the valid PIN, access granted to:

 Care	 PIN
 Beverages	 Timer
 Operating options	 System
 Accounting (with "delete")	 Language
	 USB



The Accounting PIN can be used to change the other two PIN numbers. If you have forgotten the Accounting PIN, it can be reset only by our service department.

Re-enter PIN

Once a PIN has been assigned for access rights, the PIN number must be entered here in order to assign a new PIN.



4.9 Timer

Time / date

The current time of day and the date are set here.

Timer

The timer functions in general can be switched on and off here.

Options: • active • inactive

 
 
Default value: active

active The timer switching times are active.

inactive The timer switching times are not carried out.

Timer overview and setting the timer

Overview of all switch on and switch off times



The switching points can be changed only from the daily view.

Delete timer

To delete a previously highlighted switching time, touch the Delete symbol.



Daily timer overview

Switching between daily and weekly overview. The daily overview shows switching times for the current day.



Set timer switching times

The following functions can be switched by means of the timer.

- Button layout
- Eco mode
- ON/OFF timer
- AutoClean cleaning cycle



 All changes to switching times take effect in the future only.

NOTE

- * Select desired timer option
- * Select individual day or days
- * Set timer switching times

The times are previously set for all selected days. After confirmation, a weekly overview is displayed with the switch time settings. The individual times can be modified in this weekly overview, as desired.

AutoClean cleaning cycle

Options: • active • inactive

Default value: active

active If "Active" is set for the AutoClean function, then cleaning times can be set up for AutoClean. This defines when the cleaning will start automatically.

Select whether the machine should shut down after cleaning, or whether to perform intensive system cleaning. Also set whether milk beverages will be enabled following the intensive system cleaning cycle.



- > Set an ON/OFF timer for the days of intended operation.
- > Link these times to a cleaning cycle.

Example:

hours of operation Mo-Fr 8 AM – 6 PM.

- > Set the ON/OFF timer with cleaning for 7:30 AM – 6:30 PM.

We recommend setting up intensive system cleaning prior to breaks in operation that last longer than one day.

TIP

Follow safety instructions for customer care

▷ page 85

Safety and warranty

▷ page 129

Button layout

Options: • active • inactive

Default value: inactive

active Button layouts can be assigned automatically via the timer.



Button layout

Eco mode

This setting determines whether Eco mode timers can be adjusted.

Options: • active • inactive

Default value: active inactive



 
Daylight saving time

Set whether to switch to daylight saving time automatically here.

This menu is displayed only if no telemetry module is installed.


Options: • active • inactive

Default value: active inactive




Time zone

 The time zone can be set here.



4.10 System

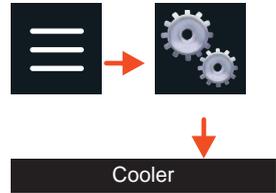

Cooler

Milk storage temperature

Enter the milk storage temperature here.
For example, <50 °F (10 °C). when using Cup&Cool.



*Possible with optional Cup&Cool
with temperature monitoring.*

Empty message

(Cooler with low-level warning function is required)

This setting determines whether a milk empty message will be shown.

The empty message can be coupled with a beverage lockout. This is especially important for self-service mode, so that paid beverages are guaranteed to be dispensed completely.

Temperature sensor

(Cooler with sensor required)

 
The milk temperature is measured.

Quality check (Dynamic Milk)

External influences can cause changes to the milk temperature, milk foam volume, and milk foam quality in the milk system.

The "Quality check" menu can be used to reset the settings to their base values.

- * Fill the blue cleaning container with cold water
- * Connect the milk hose
- * Place a measuring cup with approx. 0.132 gal (500 ml) capacity under the spout
- * Start the calibration
- * As soon as the measuring cup has been filled with 0.132 gal (500 ml) (+/- 0.005 gal/20 ml), stop the calibration



Progress display

Options: line, circle, off

Default value: line



Display and illumination

Illumination

 
The illumination color is set here.

Set the desired color from the color circle above the triangle. The color can also be defined and set by means of RGB values.

There are also the following options:

- Slow color change
- Standard color change
- Quick color change
- Off

The current setting is displayed immediately.



Illumination when "Ready to operate"

- Standard color side

Event display (message)

Options: • active • inactive

For example, "Beans empty" message.

Default value:  inactive

active The illumination during a message can be adjusted.

Illumination for messages (event)

- Event color side

Display brightness

The brightness of the display is adjusted here.

Reduce brightness automatically

Options: • active • inactive

Default value:  active

active If "Reduce brightness" is set to "active", then the display brightness is reduced automatically 5 minutes after the last beverage is dispensed. If the display brightness has been dimmed, the display returns to the selected brightness level when it is first touched. The second time a beverage button is touched, the corresponding beverage is dispensed.

Touch calibration

Recalibrate the touch display.

Display background

The color design for the touch display can be set here.

Beverages: Font + color

This setting determines whether the font size and color are allowed to be changed.

Options: • active • inactive

Default value: inactive

Water filter

Options: • active • inactive

Default value: inactive

active Water filter is fitted. Capacity and water hardness are queried.



Water filter

Note
We recommend using a water filter. Your WMF Service partner will be happy to advise you on the right water filter to use.

Measured carbonate hardness

Enter the measured water hardness in °dKH (gpg) here.
The carbonate hardness test is supplied with the accessories.

 If the coffee machine is run with the wrong water hardness setting, this can lead to severe lime build up and thus to leaking valves.
No liability is assumed for any resulting damage.

NOTE

Determine the water hardness

* Request drinking water hardness from water supplier, or determine using WMF carbonate hardness test (complete with instructions) in the accessories

Measured total hardness

Enter the measured total hardness.

Filter capacity

Enter the filter capacity in liters here.

Eco mode

The Eco mode can be activated here.

Options: • active • inactive

Default value: inactive

Switch off

Options: never, 30 min/60 min/90 min/120 min/
150 min/180 min

Default value: never

Temperature

The boiler water temperature is set here.
(coffee brewing water temperature)



Eco mode

▷ Eco mode
page 82

 


Temperature

Antifreeze / transport preparation

The routine for partially emptying the boiler water system is started here.

Partially emptying is necessary prior to shipping via courier or package carrier, particularly in winter months, in order to prevent damage.



Grinding degree setting

The grinding degree can be adjusted from the display.

- Grinding degree grinder 1
- Grinding degree grinder 2

Lower number -> finer grinding degree

Higher number -> more coarse grinding degree

The setting has intervals of 0.25.

Up to half a grinding degree can be adjusted in each step. The grinder must be run between each adjustment.

Only for trained personnel and service.



Portioner

The names of the beans and powders used can be saved here.

Espresso or Café Crème are the default options available.



Applies to machines with two grinders and one powder hopper.

Bluetooth (optional)

The optional WMF Bluetooth stick is required for this function.

Options: • active • inactive

Default value: inactive

- * Set Bluetooth to active here
- * Open the operating panel
- * Insert the WMF Bluetooth stick on the back side of the operating panel
- * Switch the coffee machine off and on again



S-M-L Function

Activate the S-M-L function here.

Change symbols and texts here. Beverage sizes can be changed based on the standard size (M).

Options: • active • inactive

Default value: inactive



S-M-L

Small

Standard modification factor for beverage sizes for S-recipes that are newly activated.

Default value: 75%



Large

Standard modification factor for beverage sizes for L-recipes that are newly activated.

Default value: 125%

Cup volume S-M-L

▷ Software

▷ Beverages

page 48

Tip

Beverage sizes S-M-L can also be defined in the recipe and are then available directly as a beverage button.

Syrup (optional)

Assign names and symbols to syrups here.

Activate the available metered quantities (single, double, big).



Syrup

Detailed setting capability for the syrup station

▷ User Manual for Syrup station

Nutritional information

Detailed information on about nutritional values and ingredients can be captured here for each grinder, portioner, milk, and milk foam.

 
An overview is available.



Nutritional information

Cup detection (optional)

The cup sensor detects whether there is a receptacle beneath the spout and determines its height.



Cup detection

Correction of spout position

Setting range: -0.78 inch (20 mm)
to +2.36 inch (60 mm)
Minus → Smaller distance from cup
Plus → Greater distance from cup

Steps: 0.2 inch (5 mm)

Standard: 0.4 inch (10 mm) to 0.59 inch (15 mm)

Cup height tolerance

The tolerance for cup height is set here for beverages with inactive S-M-L.

The height for a recipe is set in the beverage menu. The tolerance set here determines how precise this height must be in order to enable the beverage. The required tolerance is thus entered here.

Setting range: 0 inch/mm to ± 1.18 inch (30 mm)

Steps: approx. 0.3 inch (7.5 mm)

Mode

Choose between four different modes.

Off

The function is deactivated.

Presence detection

The cup sensor detects whether there is a receptacle beneath the spout. Once a beverage is selected, the spout automatically moves to the pre-configured height for the selected beverage.

Cup height adjustment

▷ Software

▷ Beverages

page 55

Office – moves to cup height

The cup sensor detects whether there is a receptacle beneath the spout and determines its height. The spout then moves to a preset distance from the top of the cup.

Size preselection

The cup sensor detects whether there is a receptacle beneath the spout and determines its height. Based on this value, matching beverages are shown on the display. If S-M-L pre-selection is active, the sensor performs this pre-selection.

Size setting S-M-L

In "Size preselection" mode

The cup currently under the spout is shown as a symbol on the display.

The smallest and largest cup size setting for each beverage size is displayed.



The two horizontal lines are the boundaries between the beverage sizes.

The arrow symbols can be used to move these lines.

Delete cup sizes

- * Touch 
- * Select a desired size or "All size"

The selection is deleted.

The cup size is deleted.

Add cup size

- * Place the new size cup under the spout
- * Assign the desired S-M-L size
- * Touch 

Change the size designations for beverages

▷ System

▷ S-M-L

page 77

Customer cups

This option provides the ability for the customer to use its own reusable cups in self-service mode.

When the "Customer cups" option is activated, the starting screen changes.

Here, in the cup detection, the starting screen can be set as desired.



Starting screen with customer cups

Using "Own cup"

- * Touch **Own cup**
- The beverage selection is displayed.*
- * Select desired beverage
- The desired beverage size is requested.*
- * Select the correct beverage size
- The beverage is dispensed.*

Using "Operator cup"

- * Touch **Operator cup**
- The beverage selection is displayed.*
- * Select desired beverage
- The cup sensor automatically detects the size of the cup under the spout and the beverage is dispensed according to the S-M-L settings.*



Beverage size preselection

Digital solutions



Digital solutions

Remote actions

Media packages that are not installed, but were sent via WMF Coffee Connect and not directly installed, can be implemented after the fact here.

Smart Remote

The WMF Service department can activate Smart Remote. This function can then be activated here.

4.11 Language

The language used in the display is set here. The available languages are displayed in English.



4.12 Eco mode

If Eco mode is set to active, the steam boiler temperature is reduced 10 minutes after the last beverage is dispensed.

The beverage buttons remain lit.

If a beverage with a milk component is to be dispensed when the temperature is reduced, the coffee machine needs approx. 15 seconds to heat up.

Beverage dispensing starts after the machine has heated up.



▷ Eco mode
page 75

Eco mode

Options: • On • Off • Timer

Default value: On Off



The Eco mode can be activated here.

Eco mode display

The Eco mode symbol is displayed on the in the header bar of the "Ready to operate" display.

There are two states.

Eco mode "active"

The coffee machine is currently in the reduce phase.



Eco mode "ready"

Eco mode is based on idle time, 10 minutes after the latest beverage has been dispensed.



Immediate start

When Eco mode is set to "active", the Eco mode symbol is shown on the "Ready to operate" display.



Touching the symbol activates Eco mode immediately. The symbol changes to "active."

4.13 USB

Data exchange is possible via the USB connection. As long as the USB stick is inserted, the functions will be active.

The USB connection is at the top left on the reverse side of the operating panel, behind a cover.



 
Load recipes

The recipes stored on the USB stick are loaded to the coffee machine here.




Load beverage symbols

Load photos or beverage symbols from USB stick.




Save recipes

 Current recipes are exported from the coffee machine to the USB stick here.



Save recipes as pdf file

 The active recipes, all customer recipes, or all factory recipes can be exported as PDF files.



Export counters

Current counter levels are exported from the coffee machine to the USB stick here.



 
HACCP export

The cleaning cycles performed are recorded and are exported to the USB stick here as evidence for HACCP.




Data back-up

Data settings, such as machine data, beverage data, etc. are saved to the USB stick here.




Load data

 Data settings, such as machine data, beverage data, etc. are loaded here from the USB stick to the coffee machine.
(Can be protected by a PIN.)



Load language

 If available, another display language can be loaded to the coffee machine from the USB stick here.



Firmware update

For Service only.



5 Care

5.1 Care safety instructions

Regular cleaning is essential in order to ensure problem-free operation of the coffee machine and to ensure optimum coffee quality.



Health hazard / hygiene

- Milk is very sensitive. Germs that can pose a health hazard can build up in the milk system.
 - > Clean the milk system daily.
 - > For coffee machines without Plug&Clean, also perform manual cleaning of the combi spout after the end of operations each day.
 - > For coffee machines with Plug&Clean, also perform manual cleaning of the combi spout once per week after the end of operations.
 - > Replace the milk hose at regular intervals.
 - > Change the mixer hose at regular intervals.
 - > Follow all hygiene instructions.
 - > Follow the HACCP cleaning schedule.

CAUTION

Follow the Safety chapter
▷ starting on page 5



Health hazard / hygiene

- Germs can multiply in a coffee machine that is not in use.
 - > Prior to and after every instance that the machine is shut off for several days, perform all cleanings.

CAUTION

Follow the Safety chapter
▷ starting on page 5



Health hazard / hygiene

- All cleaning agents are perfectly tuned to the cleaning programs.
 - > Use only WMF cleaning and descaling agent.

CAUTION

Follow the Safety chapter
▷ starting on page 5



Health hazard / irritation and scalding hazard



- Hot cleaning fluid and hot water runs out of the combi spout when cleaning. The adjacent surfaces and spouts become hot.
 - Hot liquids can irritate the skin, and the heat poses a scalding hazard.
 - > Never reach under the spouts while cleaning.
 - > Make sure that persons who have not been instructed, and especially children, stay away from the coffee machine while it is cleaning.
 - > Always lock out the touch display with "CleanLock" before cleaning.
 - > Ensure that no one ever drinks the cleaning solution.
-

CAUTION

Follow the Safety chapter
▷ starting on page 5



Dynamic Milk

If no beverage with milk has been dispensed for 119 minutes, an automatic milk system cleaning is started and the system is filled with fresh milk.

NOTE



Note

- The next time the coffee machine is switched on, fill up the milk again to complete the cleaning program.
-

NOTE

5.2 Cleaning intervals overview

Care							Instructions
Daily	Weekly	Regularly	Automatic	Message			
Cleaning programs							▷ starting on page 88
x					System cleaning	0	
	x				Intensive system cleaning (AutoClean)	0	
x					Milk system cleaning	0	
x			x		Foamer rinsing	0	
x					Mixer rinsing *	0	
				x	Descaling		
			x	x	FFC filter change *	0	
Manual cleaning							
x					Clean the operating panel (CleanLock)	0	
x					Clean the grounds container		
		x			Clean the brewing unit		
	x				Clean the water tank		
x					Clean the drip tray	0	
x					Clean the housing and the cup sensor		
x					Cleaning the milk system, Basic Milk		
	x				Cleaning the milk system, Plug&Clean		
	x				Cleaning the milk system, Easy Milk		
	x				Cleaning the milk system, Dynamic Milk		
(x)	x				Clean the mixer *	0	
		x			Clean the bean hopper		
		x			Clean the powder hopper *		



▷ starting on page 98

▷ starting on page 95

▷ page 103

▷ page 104

▷ page 104

▷ page 107

▷ page 107

▷ page 108

▷ page 96

▷ page 96

▷ page 96

▷ page 96

▷ page 111

▷ page 112

▷ page 113

Daily = Daily, at least once per day, and as needed

Weekly = Weekly cleaning

Regularly = Regularly as needed

Automatic = Automatic processing

Message = After the display shows a message

(x) = Daily for severe soiling

* = Optional (depending on the model)

Instructions = Instructions available in the menu ▷ "Software" ▷ "Care"

5.3 Cleaning programs

5.3.1 System cleaning

System cleaning is an automatic cleaning program and, depending on the milk system, uses either a WMF cleaning tablet or a cleaning liquid to clean the coffee system of the coffee machine.

A milk system cleaning and mixer rinsing are parts of the system cleaning. The optional FFC function is also cleaned as a part of system cleaning when needed. Total duration is approx. 10 minutes.

Instructions as animation

▷ Main menu

▷ Care

▷ Instructions

▷ Syrup station cleaning instructions



Health hazard / irritation and scalding hazard



- During cleaning, hot cleaning solution and hot water run out of the combi spout and out of the hot water spout.
- Hot liquids can irritate the skin, and the heat poses a scalding hazard.
 - > Never reach under the spouts while cleaning.
 - > Ensure that no one ever drinks the cleaning solution.



CAUTION

Follow the Safety chapter

▷ starting on page 5



The cleaning program provides a step-by-step guide through the system cleaning on the display.
Follow the messages.

NOTE

System cleaning (Basic Milk)

Start

- * Start the Care menu
- * Touch **System cleaning**

This query appears: "switch off after cleaning?"

- If confirmed with **Yes**, the coffee machine switches off after cleaning.
- If confirmed with **No**, the coffee machine remains switched on after cleaning.
- * Select desired option
- * Follow the information on the display



During cleaning, a small amount of rinse water may get into the coffee grounds container. This is not an error.

System cleaning (Basic Milk with Plug&Clean)

For system cleaning for coffee machines with Plug&Clean, the Plug&Clean adapter is used for cleaning.

Start

- * Start the Care menu
- * Touch **System cleaning**
- * Follow the information on the display



System cleaning (Easy Milk / Dynamic Milk)



Health hazard / scalding hazard



- During the cleaning cycle, hot cleaning solution flows into the container.
 - > Carefully empty the cleaning container after cleaning.
-



Never place the cleaning container in the cooler while it is hot, as this can damage the cooler.

For system cleaning for coffee machines with Easy Milk / Dynamic Milk, the special blue cleaning container is required for cleaning.

Start

- * Start the Care menu
- * Touch **System cleaning**
- * Follow the information on the display

System cleaning cycle (AutoClean)

The daily system cleaning cycle runs fully automatically with AutoClean. The blue cleaning container is no longer needed.

The machine dispensed the required amount of cleaning agent fully automatically.

- * Start the Care menu
- * Touch **System cleaning**
- * Follow the information on the display

The system cleaning cycle can optionally be set up from the Timer menu.



CAUTION

Follow the Safety chapter
▷ starting on page 5

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129



AutoClean
▷ Software
▷ Timer
page 69

Intensive system cleaning (AutoClean)



Health hazard / scalding hazard

- If the Plug&Clean adapter is pulled out while the cleaning or rinsing cycle is running, hot water or steam may escape.
- > Never pull out the Plug&Clean adapter while the cleaning or rapid rinse cycle is running.

Start

Once a week, or prior to shutting down operations for longer than one day, an intensive system cleaning must be performed.

- * Start the Care menu
- * Touch **Intensive system cleaning**
- * Follow the information on the display
- * Remove the milk hose from the container
- * Connect the milk hose to the Plug&Clean socket of the machine

The machine dispensed the required amount of cleaning agent fully automatically.

The intensive system cleaning cycle can optionally be set up from the Timer menu.



Check to make sure that the Plug&Clean adapter and the milk hose are seated correctly.

CAUTION

Follow the Safety chapter
▷ starting on page 5



NOTE

Follow the Safety chapter
▷ starting on page 5

Follow the Warranty chapter
▷ starting on page 129

Rapid rinsing (AutoClean)



Health hazard / scalding hazard

- If the Plug&Clean adapter is pulled out while the cleaning or rinsing cycle is running, hot water or steam may escape.
 - > Never pull out the Plug&Clean adapter while the cleaning or rapid rinse cycle is running.
-

Once a day, the milk hose must be rinsed using the rapid rinse function.

- * Remove the milk hose from the container
- * Connect the milk hose to the Plug&Clean socket of the machine

The rapid rinsing cycle starts automatically once the Plug&Clean adapter is locked.

The LED on the Plug&Clean socket flashes as soon as the rapid rinsing cycle is complete.



When connecting a new milk container, always perform a rapid rinse.
Duration: 1–2 minutes



Check to make sure that the Plug&Clean adapter and the milk hose are seated correctly.

CAUTION

Follow the Safety chapter
▷ starting on page 5



TIP

NOTE

Follow the Safety chapter
▷ starting on page 5
Follow the Warranty chapter
▷ starting on page 129

5.3.2 Milk system cleaning



Health hazard / scalding hazard



- During rinsing, hot rinsing water flows out of the combi spout.
- > Never reach under the spouts while rinsing.



CAUTION

Follow the Safety chapter
▷ starting on page 5

Milk system cleaning can be started separately. This makes sense if there are longer periods between dispensing milk beverages.

The milk system cleaning rinses the milk hose, the milk nozzles, and the combi spout.

- * Start the Care menu
- * Touch **Milk system cleaning**
- * Follow the information on the display

Instructions as animation

- ▷ Main menu
- ▷ Care
- ▷ Instructions

5.3.3 Foamer rinsing



Health hazard / scalding hazard



- During rinsing, hot rinsing water flows out of the combi spout.
- > Never reach under the spouts while rinsing.

CAUTION

Follow the Safety chapter
▷ starting on page 5

For coffee machines with Plug&Clean or Easy Milk, there is a foamer rinsing that can be started when needed. The foamer rinsing can also take place automatically. This is started automatically after 3 minutes since the last milk beverage was dispensed. An acoustic warning signal sounds before foamer rinsing starts automatically.

When the foamer rinsing is activated, there must be no previously dispensed beverages located beneath the combi spout.

- * Start the Care menu
- * Touch **Foamer rinsing**
- * Follow the information on the display

Instructions as animation
▷ Main menu
▷ Care
▷ Instructions

5.3.4 Foamer rinsing (Dynamic Milk)

For coffee machines with Dynamic Milk, the foamer is rinsed automatically every 2 hours.

5.3.5 Mixer rinsing



Health hazard / scalding hazard



- During rinsing, hot rinsing water flows out of the combi spout.
- > Never reach under the spouts while rinsing.

Mixer rinsing can be started separately.

- * Start the Care menu
- * Touch **Mixer rinsing**
- * Follow the information on the display



CAUTION

Follow the Safety chapter
▷ starting on page 5

Instructions as animation
▷ Main menu
▷ Care
▷ Instructions

5.3.6 FFC filter change



Health hazard / scalding hazard

- > The filter capsule remains hot immediately after coffee is dispensed via the filter.
- > Allow the filter capsule to cool slightly before replacing.



CAUTION

Follow the Safety chapter
▷ starting on page 5

Replace the filter after 100 brewing cycles/72 hours.

- * Start the Care menu
- * Touch **FFC filter change**

The display-guided instructions are launched.

- * Follow the instructions on the display
- This menu shows how many more drinks can be dispensed via this filter and how many hours remain before filter replacement is due.

5.3.7 Milk system cleaning overview

Automatic cleaning programs
 ▷ page 88
 Clean the milk system manually
 ▷ page 108

	Milk system			
	Basic Milk	Plug&Clean	Easy Milk	Dynamic Milk
Automatic foamer rinsing		x	x	x
System cleaning; Basic Milk	x			
System cleaning; using Plug&Clean adapter		x		
System cleaning; with cleaning container			x	x
Daily ; clean milk system manually	x			
Weekly ; clean milk system manually		x	x	
Regularly ; manually clean the outside of the combi spout	x	x	x	x

 If the foamer rinsing is set to "inactive", then manual cleaning of the milk system must be performed daily for machines with Plug&Clean or Easy Milk as well.

NOTE

5.4 Add cleaning agent (AutoClean)

Coffee cleaning granulate

- * Open manual insert lid
- * Flip the green flap forward
- * Remove the granulate dispenser from the machine and turn it upside down
- * Open the dispenser by turning it
- * Remove the empty cleaning granulate container and insert a new one



Milk system cleaner

- * Unscrew the cleaning adapter from the empty bottle of milk system cleaner
- * Connect a new bottle of WMF milk system cleaner



5.5 Descaling



Health hazard / irritation and scalding hazard



- During cleaning and descaling, hot cleaning solution or descaling solution flows out of the combi spout.
 - Hot liquids can irritate the skin, and the heat poses a scalding hazard.
 - Cleaning and descaling agents can be hazardous to health upon contact or if ingested.
 - > Never reach under the spouts while cleaning or descaling.
 - > Ensure that no one ever drinks the cleaning solution or descaling solution.
 - > Be familiar with the product information on the bottle of descaler.
-

CAUTION

Follow the Safety chapter
▷ starting on page 5



Burn hazard



- When dispensing beverages and steam, hot liquid comes out of the spouts. The adjacent surfaces and spouts become hot.
 - > If the coffee machine is still hot, a cooling routine starts first. Duration of the cooling routine is 5–10 minutes.
 - > Wait until the cooling routine has finished.
-

CAUTION

Follow the Safety chapter
▷ starting on page 5



- WMF care products are designed and tested for use with these materials. Any other descaling agent may cause damage to the coffee machine.
 - > Use only WMF Descaling Agent.
- No liability is accepted for damage caused by the use of any other descaling agent and guarantee / warranty claims will not be recognized.

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129

The water hardness, the water flow, and whether a water filter is used determine the schedule for descaling. This point in time is calculated and displayed by the WMF 1500 S+.

Descaling takes place in four stages.

- Cooling routine (when machine is heated up)
- Preparation
- Descaling
- Rinsing



Total duration of descaling is approx. 80 minutes.
The procedure may not be interrupted.

The following is needed for descaling:

- 2 bottles of WMF liquid descaling agent (0.20 gal/0.75 liters each)
- 3 bottles of warm water (total 0.60 gal/2.25 l)
- 1.32 gal (5 liters) collection container



Display messages lead you step by step through the program. Start begins a sequence that must be adhered to.
Follow the messages.

IMPORTANT

Access descaling program

- * Start the Care menu
- * Touch **Descaling**
- * Continue with 5.5.1 or with 5.5.2
- * Follow the display messages

▷ Main menu
▷ Care
▷ Descaling

5.5.1 Descaling coffee machine with constant water connection

Cooling routine (when machine is heated up)

If the coffee machine is still hot, a cooling routine starts first.

Duration of the cooling routine is 5–10 minutes.



Burn hazard



- Hot steam comes out during the cooling routine.
- After final rinsing the steam boiler is heated up. The hot water expands and finally exits as steam.
 - > Do not reach beneath the spouts while descaling is in progress.
 - > Do not touch the hot spouts.

CAUTION

*Follow the Safety chapter
▷ starting on page 5*

Descaling

- * Remove water tank
- * Remove the water filter, if fitted
- * Stir liquid descaling agent in water tank with warm water
- * If crystals have formed when stored below the freezing point, stir until all crystals present in the liquid descaling agent have dissolved
- * Replace the water tank filled with descaling solution, and confirm on the display
- * Place a collection container with approx. 1.32 gal (5 liters) capacity under the coffee and hot water spout
- * Slide the combi spout downward

Descaling starts.

This part of the routine takes approx. 40 minutes.

- * Empty collection container
- * Empty remaining descaling solution from water tank
- * Rinse the water tank and fill to the maximum level with cold water

Crystals may form in the liquid descaling agent when stored.

The crystals must not enter the coffee machine.

The ideal water temperature is approx. 98.6 °F (37 °C).

*Order numbers of the article
▷ Appendix
Accessories and spare parts
page 134*

- * Replace the water tank
- * Replace the collection container

Rinsing

Rinsing starts.

This part of the routine takes approx. 30 minutes.

- * When requested refill with fresh cold water
- * Empty collection container
- * Empty water tank
- * Insert the water filter, if fitted
- * Replace the water tank

The descaling is complete.

Completion is indicated on the display.

5.5.2 Descaling coffee machine with constant water connection

Cooling routine (when machine is heated up)

If the coffee machine is still hot, a cooling routine starts first.

Duration of the cooling routine is 5–10 minutes.



Burn hazard



- Hot steam comes out during the cooling routine.
- After final rinsing the steam boiler is heated up. The hot water expands and finally exits as steam.
 - > Do not reach beneath the spouts while descaling is in progress.
 - > Do not touch the hot spouts.



CAUTION

*Follow the Safety chapter
▷ starting on page 5*

Descaling

- * Turn off main water supply tap
- * Remove water tank
- * Turn and remove seal plug on water tank coupling counter-clockwise (flat screwdriver, see illustration 1 and 2)
- * Stir liquid descaling agent in water tank with warm water
- * If crystals have formed when stored below the freezing point, stir until all crystals present in the liquid descaling agent have dissolved
- * Replace the water tank filled with descaling solution, and confirm on the display
- * Place a collection container with approx. 1.32 gal (5 liters) capacity under the coffee and hot water spout
- * Slide the combi spout downward

Descaling starts.

This part of the routine takes approx. 40 minutes.

- * Empty collection container
- * Empty remaining descaling solution from water tank
- * Rinse the water tank and fill to the maximum level with cold water
- * Replace the water tank
- * Replace the collection container

The water tank coupling is located behind the water tank.

▷ *Illustration 1*

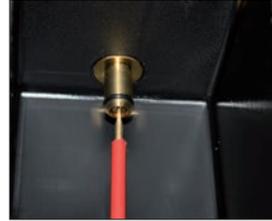


Illustration 1



Illustration 2

Crystals may form in the liquid descaling agent when stored. The crystals must not enter the coffee machine.

The ideal water temperature is approx. 98.6 °F (37 °C).

Order numbers of the article

▷ *Appendix*

*Accessories and spare parts
page 134*

Rinsing

Rinsing starts.

This part of the routine takes approx. 30 minutes.

- * Empty collection container
- * Empty and dry the water tank
- * Thread in the sealing plug again
(use a flat screwdriver; see illustration 1 and 2)
- * Place the water tank
- * Replace the collection container
- * Turn on main water supply tap

Subsequent rinses are from the mains supply.

The descaling is complete.

Completion is indicated on the display.

5.6 Manual cleaning

*Order numbers for the WMF care program
▷ Accessories and spare parts
page 134*

5.6.1 Clean the operating panel (CleanLock)

- * Touch **CleanLock**

A 15-second countdown starts.

The touch display can now be cleaned.

The touch display is activated again 15 seconds after the last time it was touched.



Scalding hazard

- If a beverage is initiated accidentally, there is a hazard of being injured.
 - > Always lock out the touch display with "CleanLock" before cleaning.



CAUTION

*Follow the Safety chapter
▷ starting on page 5*



- There is a risk of causing scratches or scoring.
 - > Clean the display with a clean, damp cloth. Do not use any cleaners or implements.
 - > Use soft cloths for cleaning.
 - > We recommend a damp microfiber cloth.

IMPORTANT

*Follow the Warranty chapter
▷ starting on page 129*

5.6.2 Clean the grounds container (grounds chute, optional)

- * Empty grounds container and rinse under running drinking water
- * Clean with a clean, damp cloth
- * Dry the grounds container and replace it



-
- ! > On coffee machines with grounds disposal through the counter, the grounds chute must be cleaned daily.
 - > Never use force. Danger of breakage.
-

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129

5.6.3 Clean the brewing unit

Pinching or crushing hazard / risk of injury

-  • The coffee machine contains moving parts that can cause finger or hand injury.
 - There is a risk of pinching when removing the brewing unit.
 - > Always switch off the coffee machine and unplug the mains plug before reaching into the coffee grinder or the opening of the brewing unit.
 - > Hold the brewing unit tightly and remove it carefully.
-

CAUTION

Follow the Safety chapter
▷ starting on page 5

The brewing unit should be cleaned when needed and at regular intervals. Recommendation: monthly.

- * Press the ON/OFF switch until coffee machine switches off
- * Disconnect mains plug
- * Push combi spout all the way up
- * Remove grounds container
- * Remove the drip tray

Brewing unit is now fully accessible.



Burn hazard



- The brewing unit can still be hot immediately after switching off.
- > Allow the coffee machine to cool before cleaning.



- The brewing unit can slip downwards.
- > Always hold the brewing unit securely.
- > Never use force. Danger of breakage.

- * With one hand, reach into the chute under the brewing unit and release and hold the retaining catch (illustration 1)
- * Slowly guide the brewing unit downwards, tilt and pull forward
- * Remove the brewing unit and hold firmly (illustration 2)

Use the multitool from the accessories.

- * Turn the thread on the brewing unit head counter-clockwise (illustration 3) until the scraper is in the forward position
- * Squeeze the funnel [1] slightly and pull it up to remove it
- * Pull the springs outward and press them down
This unlocks the insertion chute.

- * Swing the insertion chute [2] upwards
- * Clean the brewing sieve under running water or with a cloth

CAUTION

Follow the Safety chapter
▷ starting on page 5

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129



Illustration 1



Illustration 2

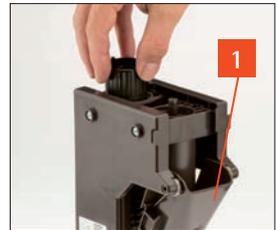


Illustration 3



Illustration 4

- * Remove coffee grounds residue using a paint-brush or scrubber
- * Rinse the brewing unit under running water

Potential damage

- The brewing unit can be damaged by cleaning agent or in a dishwasher
 - > Only use water to clean the brewing unit.
 - > Never clean the brewing unit in the dishwasher.

- * Dry the brewing unit with a cloth
- Allow to dry completely before reinstalling in the coffee machine.

Remove coffee grounds residue from the chute.

- * Wipe out the coffee grounds forward or suck out using a vacuum cleaner
- * Replace springs in insertion chute (illustration 5)
- * Squeeze the funnel [1] slightly and re-insert it

Use the guides.

Refit the brewing unit after it has been dried.

- * Hold the retaining catch compressed and replace the brewing unit in the chute against rear cover
- * Push the brewing unit upwards until it engages in the retaining catch
- * Replace the grounds container
- * Replace drip tray

 If the brewing unit cannot be inserted without resistance:

- > Turn the thread on the brewing unit head slightly to the left or right with the multitool until the brewing unit slides into the guide.
- > Never use force. Danger of breakage.

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129



Illustration 5



Brewing sieve

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129

5.6.4 Clean the water tank

Thoroughly rinse water tank weekly with clear water.



5.6.5 Clean the drip tray



Scalding hazard



- The drip tray may contain hot liquids.
- If the drip tray is not properly engaged, such as after cleaning, there is a burn hazard due to hot liquids.
 - > Be careful when moving the drip tray.
 - > Replace carefully so that no water accidentally drips down.
 - > Always make sure the drip tray is seated correctly.

- * Lift up the front of the drip tray slightly and remove it
- * Clean drip tray thoroughly
- * Rinse the drip tray with clear drinking water
- * Dry off the drip tray and replace it



Follow the Safety chapter
▷ starting on page 5



Instructions
▷ Software ▷ Care
page 47

With optional syrup station
▷ Syrup station cleaning
instructions

5.6.6 Clean the housing and the cup sensor



- There is a risk of causing scratches or scoring.
 - > Do not clean with scouring powders or the like.
 - > Use only very mild cleaning agents.
 - > Do not use any severely alkaline, alcoholic, or degreasing cleaning agents.
 - > Use soft cloths for cleaning.
 - > We recommend a damp microfiber cloth.
-

For cleaning metal cover parts (matte surface) we recommend WMF Purargan® cleaner.

- * Switch off the coffee machine using the ON/OFF switch
- * Allow the coffee machine to cool before cleaning
- * Once the coffee machine has cooled down, clean the housing with a damp cloth
- * Wipe dry with a fine cloth
- * Clean the sensor with a clean, damp cloth

5.6.7 Clean the milk system manually

Clean the milk system manually (Basic Milk / Easy Milk)



Scalding hazard

- If a beverage is initiated accidentally, there is a hazard of being injured.
 - > Always switch off the coffee machine prior to cleaning.
 - > Disconnect mains plug.
-

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129

Note

Durability can be compromised with alkaline cleaning agents, solvents such as acetone, carbon, carbon tetrachloride, paint thinner, or alcohol compounds >5%, ammonia, benzene, glycerine, xylol, abrasives, degreasing flushing agents, and strong spray cleaners for glass are also not suitable.

Clean the display with a clean, damp cloth. Do not use any cleaners or implements.

CAUTION

Follow the Safety chapter
▷ starting on page 5

Instructions as animation
▷ Main menu
▷ Care
▷ Instructions



Health hazard

- In case of eye contact, the WMF milk system cleaner can cause severe eye injury.
- > Ensure that the milk system cleaner never makes contact with the eyes of a person or animal.

CAUTION

Follow the Safety chapter
▷ starting on page 5



- > Before the milk system is cleaned manually, a system cleaning cycle must be performed. The system cleaning removes milk residue from the system.

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129

- * Pull forward the lever behind the combi spout
- * Remove combi spout
- * Only with Basic Milk: remove milk hose from milk container and release from combi spout
- * Release the mixer hose (if present)
- * Mix 5 ml (0.001 gal) of WMF special cleaner or a special cleaning tablet with 0.132 gal (500 ml) of warm drinking water
- * Dismantle combi spout
- * Only with Basic Milk: immerse one end of the milk hose in the cleaning solution
- * Only with Basic Milk: immerse the length of the remaining milk hose in the cleaning solution

This procedure prevents air bubbles from remaining in the milk hose.



- * Place all parts of combi spout in the cleaning solution (3 parts)

All parts must be completely immersed in the cleaning solution.

- * After 5 hours, clean all parts thoroughly with a brush
- * Rinse all parts of the combi spout very thoroughly with clear drinking water
- * Only with Basic Milk: thoroughly rinse the milk hose
- * Thoroughly rinse the mixer hose (if present)
- * Place on the mixer hose
- * Reassemble combi spout
- * Replace combi spout
- * Only with Basic Milk: place on the milk hose



Clean the combi spout manually (Dynamic Milk)

- ! For coffee machines with Dynamic Milk, the foamer must not be removed.
-

Regularly clean the outside of the combi spout with a damp cloth and clean the dispensing openings with the appropriate brushes.

Clean the Plug&Clean socket (AutoClean)

Clean the Plug&Clean socket with a brush when needed.

IMPORTANT

Follow the Warranty chapter
▷ starting on page 129

5.6.8 Clean the mixer

Clean more frequently depending on the powder used.



Scalding hazard

- If the mixer hose is not firmly attached, hot water or hot powder beverage can be discharged inadvertently.
 - > Always install the mixer hose firmly.

- * Slide the operating panel upward
- * Pull the mixer hose off of the combi spout and use the handle to move the mixer bowl upward
The propeller for the mixer is now visible.

Daily

- * Remove the mixer bowl
- * Disassemble the mixer bowl into its four component parts
- * Thoroughly clean the parts under running drinking water

When needed (weekly)

- * Mix 5 ml (0.001 gal) of WMF special cleaner or a special cleaning tablet with 0.132 gal (500 ml) of warm drinking water
- * Immerse all four parts in the cleaning solution at least for 4 hours
- * After 4 hours, thoroughly rinse under running drinking water again
- * Remove the powder hopper and clean the loading chute to the mixer bowl with a cloth or brush
- * Allow all parts to dry completely [1]



On re-assembly, all openings must face in the same direction.

- * Insert the mixer wheel [2] as shown in the illustration

The green side should be visible after insertion.

- * Attach mixer hose on the mixer bowl
- * Replace mixer bowl until it engages in the lock
- * Attach mixer hose on the combi spout



CAUTION

Follow the Safety chapter
▷ starting on page 5

Instructions
▷ Main menu
▷ Care
▷ Instructions



5.6.9 Clean the bean hopper

The bean hoppers should be cleaned when needed and at regular intervals. Recommendation: monthly.



Risk of injury

- Long hair could become caught in the grinder head and drawn into the coffee machine.
- > Always protect hair with a hairnet.

 **CAUTION**



Pinching or crushing hazard / risk of injury



- The coffee machine contains moving parts that can cause finger or hand injury.
- > Always switch off the coffee machine and unplug the mains plug before reaching into the coffee grinder or the opening of the brewing unit.

 **CAUTION**



- > Never clean the bean hoppers in a dishwasher.

IMPORTANT

* Slide the operating panel upward

The ON/OFF switch is on the right side, behind the operating panel.

* Press the ON/OFF switch briefly until a signal sounds

* Disconnect mains plug

* Turn the lock on the bean hopper 180° to open it

* Lift bean hoppers out

* Completely empty bean hoppers and wipe out thoroughly with a damp cloth



Rotate the lock by 180°



- * Allow bean hoppers to dry completely
- * Refill and replace bean hoppers
- * Turn the lock on the bean hopper 180° to lock it

5.6.10 Clean the powder hopper

The powder hopper should be cleaned when needed and at regular intervals.

Recommendation: monthly.

Clean more frequently depending on the powder used.

- * Slide the operating panel upward
- The ON/OFF switch is on the right side, behind the operating panel.*
- * Press the ON/OFF switch briefly until a signal sounds
- * Disconnect mains plug
- * Turn the lock on the powder hopper 180° to open it
- * Tip hopper backwards and remove upwards
- * Empty hopper completely
- * Unscrew union nut at front and rear
- * Pull out the dosing auger
- * Thoroughly wipe out hopper with a damp cloth
- * Thoroughly clean individual dosing auger components
- * Allow powder hopper and individual components to dry completely
- * Re-assemble and replace the dosing auger and screw on union nuts



Portioner with individual parts.
Dosing auger



Ensure correct orientation of discharge.

IMPORTANT

- * Refill and replace powder hopper
- * Turn the lock 180° to relock it

6 HACCP cleaning schedule

You are required by law to ensure that your customers are not subject to any health hazards as a consequence of the consumption of the food items you serve.

A HACCP cleaning schedule (Hazard Analysis Critical Control Points) for risk identification and assessment is required. You should perform a risk analysis on your premises. The aim of the analysis is to recognise and pre-empt food hygiene hazard points. For this purpose, monitoring and, where necessary, test procedures must be established and implemented.

With correct installation, care, maintenance, and cleaning, WMF coffee machines meet the requirements described above. If care and cleaning of the coffee machine is not carried out properly, dispensing milk beverages will constitute a food hygiene hazard point. Please observe the following points in order to comply with the HACCP cleaning schedule:

Sanitize the milk system daily

- Follow the cleaning instructions for the milk system in the Care chapter. This will ensure that your system contains a minimum of bacteria at the beginning of operation.

"Food Hygiene Ordinance from 05.08.1997"

Use our HACCP cleaning schedule for monitoring of regular cleaning.

*HACCP export
▷ page 84*

Use only cleaning agents that have been approved by WMF.

*Follow the Care chapter
▷ starting on page 85*



Call up the journal of the most recent cleaning operations via Information pad .
The USB pad  can be used to export an HACCP journal.

TIP



Always commence operation with a freshly opened chilled milk pack

- Original packaged UHT milk is usually free from harmful bacteria. Always open a new chilled milk pack at commencement of operation.
- Ensure absolute cleanliness when opening the milk pack. Germs can be introduced from dirty hands or tools when opening.

Recommendation:

only use UHT milk with a 1.5% fat content.

Keep milk cool.

- Always have a new cooled milk pack handy.
- If cooling is not used during operation, then the milk must be used up very quickly. Cool the milk occasionally if needed.
- If little milk is used, chilled milk must be placed in the refrigerator again during operation.

At commencement of operation milk should be at approx. 42.8°F-46.4 °F (6-8°C).

Depending on the setting, one liter of milk is sufficient for approx. 20 cappuccinos.

WMF offers a range of refrigeration options (e.g., WMF countertop coolers or WMF milk coolers).

Month _____ Year _____

HACCP cleaning schedule

Only use chilled UHT milk, to prevent health risks due to bacteria.
For powder beverages, use only products that have not exceeded their expiration date.

Cleaning steps:

1. Perform a system cleaning
 ▷ User Manual, Care chapter
- 2a. Clean the milk system manually
 Basic Milk daily, with Plug&Clean or Easy Milk weekly
- 2b. Daily mixer rinsing
 ▷ User Manual, Care chapter

- 3a. Clean the milk system and change out the combi spout after 4 hours of operation time (absolutely required for a low number of dispense cycles, or if milk is non-chilled, or if the foamer rinsing function is switched off).
- 3b. Weekly mixer cleaning and regular cleaning of product hoppers (beans / powder) ▷ User Manual, Care chapter
4. General machine cleaning

Date	Cleaning steps				Signature
	1	2	3	4	
1.					
2.					
3.					
4.					
5.					
6.					
7.					
8.					
9.					
10.					
11.					
12.					
13.					
14.					
15.					
16.					

Date	Cleaning steps				Signature
	1	2	3	4	
17.					
18.					
19.					
20.					
21.					
22.					
23.					
24.					
25.					
26.					
27.					
28.					
29.					
30.					
31.					

User Manual WMF 1500 S+

115

7 Maintenance and descaling

Please observe that this is a professional industrial coffee machine which needs regular maintenance and descaling.

The maintenance date is based on the degree of use of the coffee machine and is shown on the display. If maintenance is undertaken by WMF Service, then descaling of the brewing system is done at the same time.

The coffee machine may continue to be operated after the message, but Customer Care or contract maintenance should be carried out promptly to ensure correct functioning and so as to avoid any subsequent damage.

7.1 Maintenance

Maintenance after the display message; may only be undertaken by trained personnel or by WMF Service, as in this instance components affecting safety must be replaced.

The following care or maintenance stages are provided:

- Descaling, may be undertaken by the user / operator.
- Maintenance after the display message; may only be undertaken by trained personnel or by WMF Service, as in this instance components affecting safety must be replaced.

Service maintenance message
▷ Messages and instructions
page 118

Descaling
▷ Software ▷ Care
▷ Descaling
page 98

Service maintenance message
▷ Messages and instructions
page 118

7.2 WMF Service

You can reach WMF Service if the local service point is not known.

WMF GmbH
WMF Platz 1
D - 73312 Geislingen (Steige)

Important.

For other maintenance work and repairs, please contact your local WMF Service. The telephone number can be found on the address sticker on the coffee machine and on the delivery note.



8 Messages and instructions

8.1 Messages for operation

Refill beans

- * Refill bean hopper (refer to display)
- * Check:
 - Is the bean hopper lock open?
▷ *Care*
 - Coffee beans do not feed through.
- * Stir with a large spoon and confirm with 

Open water supply

- * Turn on water tap and confirm

Empty grounds container

- * Empty grounds container

Grounds container missing

- * Replace the grounds container correctly

Change water filter

- * Change water filter

Follow water filter instructions.

- * Call WMF Service when needed

Call WMF Service

Error number is displayed

Error messages and malfunctions

▷ *page 119*

Service message

Service maintenance after the display shows a message.

- * Call WMF Service

Service messages are instructions.

It is generally possible to continue operating the coffee machine.

8.2 Error messages and malfunctions

Basic procedure on display of error messages or malfunctions.

- * Switch coffee machine off and then on again after a few seconds
- * Repeat the process which led to the error

In many cases, this eliminates the malfunction and you can continue working.

If this is not successful: find the error message or error number in the following error list and follow the action instructions indicated.

If this does not rectify the error or if the error indicated is not listed please call WMF Service.

Some messages lead to blocking of individual functions. You will notice this by the fact that the beverage button illumination goes out. The beverage buttons that are still illuminated can continue to be used.

Your WMF 1500 S+ is provided with a diagnostics program. Any errors that occur are shown on the display. The error messages listed may also be caused by an interruption to the mains electricity supply. If there is a current error or a message to the operator, the  pad is displayed.

- * Touch 

The error message and the error number are displayed.





The ON/OFF switch reacts after about 1 second and the coffee machine switches off.

In order to clear an error, for example if the software hangs up, pressing and holding the ON/OFF switch will switch off the controller.

Afterwards, switch the coffee machine on again.

NOTE

<i>Error number</i>	<i>Error description</i>	<i>Action instructions</i>
6	Brewing unit lockup current / brewing unit stiff	<ul style="list-style-type: none"> * Switch off the coffee machine * Clean the brewing unit ▷ Care ▷ Clean the brewing unit, page 104
88	Boiler: over-temperature	<ul style="list-style-type: none"> * Switch the coffee machine off, allow to cool and switch on again * If error not remedied call WMF Service
89	Boiler: heat-up time error	<ul style="list-style-type: none"> * Switch the coffee machine off and on again * If error not remedied call WMF Service
161	Flow error: brewing water	<p><i>Between each of the following steps switch off the coffee machine and on again. If error not remedied carry out the next step.</i></p> <ul style="list-style-type: none"> * Clean the brewing unit ▷ Care ▷ Clean the brewing unit, page 104 * Set the grinding degree coarser ▷ Software ▷ System ▷ Grinding degree setting, page 76 * Reduce quality ▷ Settings ▷ Recipes, page 51 * If error not remedied call WMF Service
162	Flow error: when cleaning	<p><i>Between each of the following steps switch off the coffee machine and on again. If error not remedied carry out the next step.</i></p> <ul style="list-style-type: none"> * Clean the brewing unit ▷ Care ▷ Clean the brewing unit, page 104 * If error not remedied call WMF Service

Error number	Error description	Action instructions
186	Steam boiler: level	<p><i>Beverage dispensing temporarily blocked.</i></p> <ul style="list-style-type: none"> * Switch the coffee machine off and on again * Check whether the main tap for the water inlet pipe is open
188	Heater error	<ul style="list-style-type: none"> * Switch off the coffee machine, disconnect mains plug * Call WMF Service
189	Steam boiler: heat-up time error	<ul style="list-style-type: none"> * Switch the coffee machine off and on again * If error not remedied call WMF Service
9083	Cooler temperature is in the frost range	<ul style="list-style-type: none"> * Check whether the cooler temperature is set too low
9507	Flow error: water pressure missing	<ul style="list-style-type: none"> * Open the water tap or fill up the water tank * If error not remedied call WMF Service
9678 9679 9619	Right grinder blocked Left grinder blocked	<div style="display: flex; align-items: center;"> <div style="flex: 1;"> <ul style="list-style-type: none"> * Switch off the coffee machine * Disconnect mains plug * Remove bean hopper * Rotate the grinder disk counterclockwise only by using the multitool for the hopper (two pins must be inserted in the corresponding recesses on the grinder) <p><i>▷ Care ▷ Clean the bean hopper, page 112</i></p> <ul style="list-style-type: none"> * Replace hopper * Switch on the coffee machine <p>If this occurs frequently:</p> <ul style="list-style-type: none"> * Set grinding degree one stage coarser <p><i>▷ Software ▷ System ▷ Grinding degree setting, page 76</i></p> </div> <div style="flex: 0.2; text-align: center; margin-left: 10px;">  </div> </div>

8.3 Errors without error message

Error pattern	Action instructions
<ul style="list-style-type: none"> No hot water dispensing but water in grounds container 	<ul style="list-style-type: none"> * Clean the hot water spout * Call WMF Service (coffee dispensing possible)
<ul style="list-style-type: none"> No Choc dispensing but water in grounds container 	<ul style="list-style-type: none"> * Do not use Choc dispensing * Call WMF Service (coffee dispensing possible)
<ul style="list-style-type: none"> Choc portioner blocked, Choc dispensed only with water 	<ul style="list-style-type: none"> * Clean the portioner ▷ Care ▷ Clean the powder hopper, page 113 * Empty powder * Turn dosing auger manually until all powder is removed * If necessary rinse with water * Allow all parts to dry completely
<ul style="list-style-type: none"> Loud noise when Choc is being dispensed 	<ul style="list-style-type: none"> * Remove the mixer bowl * Check whether the mixer wheel has been installed correctly ▷ Care ▷ Clean the mixer, page 111 * Replace the mixer wheel if needed
<ul style="list-style-type: none"> Coffee dispensing on the left / right differs 	<ul style="list-style-type: none"> * Clean the combi spout ▷ Care ▷ Milk system cleaning overview, page 96
<ul style="list-style-type: none"> No milk foam / no milk dispensing, but milk in the milk container 	<ul style="list-style-type: none"> * Check whether the milk hose is kinked or squashed * Re-route milk hose correctly * Basic / Easy Milk: clean the combi spout * Dynamic Milk: clean the combi spout manually * Refill milk * Dynamic Milk: refill milk and touch "Milk system refill" in the customer care menu ▷ Software ▷ Care ▷ Milk system refill, page 47 * Basic Milk: check whether milk nozzle is blocked ▷ Care ▷ Milk system cleaning overview, page 96 * Check whether milk cooler is iced

Error pattern	Action instructions								
<ul style="list-style-type: none"> • Milk foam not OK • Temperature too cold or too hot 	<p>Basic Milk</p> <ul style="list-style-type: none"> * Change milk nozzle Use a suitable milk nozzle on the combi spout. <table border="1" data-bbox="458 316 1036 354"> <thead> <tr> <th data-bbox="458 316 871 354">Milk nozzle</th> <th data-bbox="871 316 1036 354">3 kW</th> </tr> </thead> <tbody> <tr> <td data-bbox="458 354 871 392">• very cold milk (up to 46.4 °F/8 °C)</td> <td data-bbox="871 354 1036 392">green</td> </tr> <tr> <td data-bbox="458 392 871 462">• chilled milk (46.4 °F to 60.8 °F/8 to 16 °C)</td> <td data-bbox="871 392 1036 462">white</td> </tr> <tr> <td data-bbox="458 462 871 533">• non-chilled milk (above 60.8 °F/16 °C)</td> <td data-bbox="871 462 1036 533">caramel</td> </tr> </tbody> </table> <ul style="list-style-type: none"> * Clean the combi spout ▷ Care ▷ Clean the milk system manually, page 108 <p>If error not remedied</p> <ul style="list-style-type: none"> * Use another milk nozzle from the accessories 	Milk nozzle	3 kW	• very cold milk (up to 46.4 °F/8 °C)	green	• chilled milk (46.4 °F to 60.8 °F/8 to 16 °C)	white	• non-chilled milk (above 60.8 °F/16 °C)	caramel
Milk nozzle	3 kW								
• very cold milk (up to 46.4 °F/8 °C)	green								
• chilled milk (46.4 °F to 60.8 °F/8 to 16 °C)	white								
• non-chilled milk (above 60.8 °F/16 °C)	caramel								
<ul style="list-style-type: none"> • Milk foam not OK • Temperature too cold or too hot 	<p>Dynamic Milk</p> <ul style="list-style-type: none"> * Perform a quality check This function is enabled for trained staff only. Contact the Service department if needed. <p>Easy Milk</p> <ul style="list-style-type: none"> * Check whether the milk temperature is the same as the set temperature * Clean the combi spout ▷ Care ▷ Clean the milk system manually, page 108 								
<ul style="list-style-type: none"> • AutoClean Plug&Clean adapter can no longer be plugged in or locked 	<ul style="list-style-type: none"> * Check that the disc is seated properly in the Plug&Clean socket The disc can rotate out of position. 								
<ul style="list-style-type: none"> • The milk foam dispensing sputters severely • Milk too hot 	<ul style="list-style-type: none"> * Check whether the milk system has been cleaned * Clean the milk system ▷ Care ▷ Milk system cleaning overview, page 96 * Check whether the milk has been cooled sufficiently 								

Error pattern	Action instructions
<ul style="list-style-type: none"> • No powder beverage dispensing 	<ul style="list-style-type: none"> * Clean the mixer bowl * Is the hose kinked? * Perform milk cleaning and rinsing more often, if necessary daily ▷ Care ▷ Clean the mixer, page 111 * Use lower powder dosage * Use higher water dosage
<ul style="list-style-type: none"> • Pump runs continuously, water in grounds container 	<ul style="list-style-type: none"> * Switch the coffee machine off and on again * If error not remedied call WMF Service
<ul style="list-style-type: none"> • Choc hopper cannot be replaced 	<ul style="list-style-type: none"> * Manually turn the drive for the dosing auger at the portioner slightly in a clockwise direction * Check whether Choc hopper is accidentally locked
<ul style="list-style-type: none"> • Bean hopper cannot be replaced 	<ul style="list-style-type: none"> * Check whether bean hopper is accidentally locked * Check whether there are any beans between the grinder and the hopper

9 Safety and warranty

9.1 Hazards to the coffee machine



Follow the manual

Failure to follow this and resultant damage will result in loss of liability.

Follow the conditions for use and installation.

Installation location

- The installation location must be dry and protected against water spray.
- Some condensate, water, or steam can always be discharged from a coffee machine.
 - > Do not use the coffee machine outdoors.
 - > Set up the coffee machine so that it is protected against water spray.
 - > Always place the coffee machine on a water-resistant and heatproof base in order to protect the installation surface against damage.

Coffee grinder

- Foreign objects can damage the grinders. Such damage is not covered under the warranty.
 - > Ensure that no foreign objects land in the coffee bean hopper.

IMPORTANT

*Follow the Warranty chapter
> starting on page 129*

*Conditions for use and installation
> starting on page 15*

Please observe the following instructions so as to prevent problems with and damage to the coffee machine:

- For drinking water with carbonate hardness from 5 gpg (5 °dKH) or higher, a WMF water filter must be fitted. Failing to use the water filter recommended by WMF Service may damage the coffee machine (e.g. due to scale deposits).

- For insurance reasons always ensure that, at the end of operation, the mains switch is switched off or the device is unplugged. For machines with a constant water connection, the water mains tap for the inlet pipe must be closed.
- We recommend damage prevention measures, such as:
 - installation of a suitable water monitor in the mains water supply
 - installation of smoke alarms
- After a company holiday (several days or weeks) we recommend running the cleaning mode at least twice before reusing the machine.

System cleaning
▷ *Cleaning programs*
page 88

9.2 Directives

Manufacturer: WMF GmbH, 73312 Geislingen (Germany)

The coffee machine fulfills the requirements of UL 197/NSF4.

The device fulfills the requirements of all applicable regulations in the directives MD (MRL) 2006/42/EC, EMV directive (EMC) 2014/30/EU and RoHS 2011/65/EU.

The manufacturer indicated above declares that this machine conforms to all applicable provisions of the directives listed. Any modifications to the machines that are not approved by us will cause this declaration to become invalid. Collecting technical documentation: WMF GmbH.

The original declaration of conformity is included with the machine. The device bears the CE mark.

The device fulfills the requirements of the German Food and Feed Code (LFGB), the Regulation on Commodities (BedGgStV), the EU regulation No. 10/2011 as well as the EC regulation No. 1935/2004 in the currently valid editions.

When used properly, the device does not present a health hazard or other unreasonable hazard. The materials and raw materials used fulfills the requirements of the Regulation on Commodities as well as the EU regulations No. 10/2011.

This device is subject to the directive on waste electrical and electronic equipment WEEE 2012/19/EU and may not be disposed of as domestic waste. Requirements traceability pursuant to EC regulation No. 1935/2004 and Good Manufacturing Practice within the meaning of EC regulation No. 2023/2006 are ensured and guaranteed.



*For disposal please contact
WMF Service.*

*Address
▷ page 117*

Currently valid country-specific regulations apply in countries outside of the European Union.

USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Kanada

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

9.3 Duties of the owner / operator

The operator of such equipment must ensure regular maintenance by WMF Service technicians, their agents or other authorized persons, and checking of safety devices.

Access to the service area is permitted only for persons with knowledge of and practical experience with the device, especially regarding safety and hygiene.

The coffee machine must be set up by the operator such that care and maintenance can be performed without hindrance.

In office / floor kitchen areas or similar self-service set-ups, only staff instructed in operation of the coffee machine should supervise the coffee machine. Trained personnel should carry out care procedures and be available for questions regarding use.

The operator shall ensure that electrical equipment and operating facilities are in a fit state (in USA in accordance with NEC). In order to ensure the operating safety of your coffee machine, it is essential to perform regular checks of the safety valves and the pressure containers, among other checks.

These measures are conducted by WMF Service or by WMF authorized service personnel as part of the maintenance work.

Machine cleaning must be carried out using only the WMF special cleaning agents intended by WMF for the coffee machine (tablets), and for the milk system (cleaning liquid).

Machine must only be descaled using the special WMF descaling agent.

The manufacturer's specifications regarding maintenance cycles and frequency of maintenance (▷ Maintenance) must be followed.

Cleaning intervals overview

▷ page 87

HACCP

▷ page 114

WMF special cleaning agent

▷ Accessories and spare parts
page 134

WMF special descaling agent

▷ Accessories and spare parts
page 134

9.4 Warranty claims



Follow the manual

- Failure to follow this and resultant damage will result in loss of liability.
- > Follow the conditions for use and installation.

IMPORTANT

Conditions for use and installation
▷ starting on page 15

Whether the purchaser has any rights under warranty, and the nature of any such warranty rights that the purchaser may have, is determined by the agreement made between the purchaser and the vendor. If the requirements of this User Manual are not followed, warranty claims will not be recognized.

No warranty is provided:

- On any parts subject to natural wear and tear. This includes seals, mixers, and brewing unit, among other items.
- For malfunctions due to the effect of the weather, scale build-up, chemical, physical, electrochemical, or electrical effects.
- If a water filter is not fitted even though the local water supply requires use of a water filter and malfunctions occur as a consequence.
- If malfunctions occur as a result of failure to follow instructions for the handling, maintenance, and care of the unit (e.g., User Manual and maintenance instructions).
- With respect to faults which occur as the result of failure to use original WMF spare parts or incorrect assembly by the purchaser or by third parties or by faulty or negligent treatment.
- With respect to the consequences of improper modifications undertaken without the consent of WMF, or by repair or reconditioning work on the part of the purchaser or by third parties.
- With respect to faults caused by inappropriate or improper use.

Important

Maintenance
▷ page 116

Appendix: Technical data

Technical data for coffee machine

External dimensions	Width Height Depth	12.8 in (325 mm) 28.19 in 716 mm (with lockable bean hopper) 23.23 in (590 mm)
Coffee bean hopper		approx. 38.8 oz (1,100 g) each ⁽¹⁾ Coffee bean hopper in the center
Powder hopper (optional)		approx. 24.69 oz (700 g) ⁽¹⁾ approx. 70.55 oz (2,000 g) ⁽²⁾
Weight empty		70.5 lb–79.4 lb (32–36 kg) (depending on the model)
Water supply		3/8 inch hose connector with water mains tap, and dirt filter with 0.003 in (0.08 mm) mesh size, on site. ⁽³⁾ At least 29 psi (0.2 MPa/2 bar) supply pressure at 0.53 gal/min (2 l/min). Maximum 87 psi (0.6 MPa/6 bar). Important. If the customer's on-site flow pressure exceeds 87 psi (0.6 MPa/6 bar), then a pressure reducer must absolutely be connected upstream and set to a maximum of 87 psi (0.6 MPa/6 bar). Maximum inlet temperature 95 °F (35 °C). The set of hoses provided with the new coffee machine, the permanent water connection kit, or the new water filter must be used. Do not use the old set of hoses.
Water quality		For drinking water with carbonate hardness from 5 gpg (5 °dKH) or higher, a WMF water filter must be fitted.
Water drain tube (optional)		Hose a minimum of DN 19, minimum downward slope of 0.02 in/in (2 cm/m)
Use at elevation above sea level		<6.562 ft

We reserve the right to make technical modifications.

⁽¹⁾ The capacity depends on the size of the coffee beans.

⁽²⁾ Only with optional powder hopper. The capacity depends on the powder used.

⁽³⁾ These specifications (IEC 60335–2-75) for the water connection to the coffee machine apply in EU member states. It may be necessary to also observe additional country-specific regulations. Outside the EU countries acceptance of the standards quoted is to be checked by the legal entity or natural person who wishes to use the coffee machine.

Nominal power rating	1.9 kW	2.55–3.2 kW
Power supply	120 V, 60 Hz, (1/N/PE)	208/240 V, 60 Hz, (2/PE)
Illumination	LED	
Degree of protection	IP X0	
Protection class	class 1	
Calibration pressure	Boiler 1.6 MPa (232 psi) Steam boiler 0.5 MPa (72.5 psi)	
Continuous sound pressure level (Lpa)	<70 dB(A) ⁽⁴⁾	
Ambient temperature	41 °F to 95 °F (+5 °C to +35 °C) (empty the water system in case of frost).	
Maximum humidity	80% relative humidity without condensation. Do not use unit outdoors.	
Installation surface / water spray	The device must be placed and levelled on a horizontal, sturdy, water-resistant, and heatproof base. The device must not be cleaned using a water jet. The device must be installed where it is protected against water spray. The device must not be located on a surface that is sprayed or cleaned with a water hose, steam jet, steam cleaner, or similar devices.	

We reserve the right to make technical modifications.

⁽⁴⁾ A-evaluated sound pressure level Lpa (slow) and Lpa (impulses) at operating personnel workplace is under 70 dB(A) in any working mode.

Installation clearances	<p>For operating, service, and safety reasons the machine should be installed with a clearance from the building or non-WMF components of not less than 1.97 in (50 mm) at the sides and 1.97 in (50 mm) at the back.</p> <p>A minimum working space of 31.5 in (800 mm) in front of the coffee machine is recommended. Clearance of at least 7.87 in (200 mm) above the product hopper is recommended. The height of the installation surface above the floor is at least 33.47 in (850 mm). If the coffee machine connections are to be run downwards through the counter, please make space for the lines, which can reduce the usable space below the machine.</p>
Installation dimensions of the water filter	See the User Manual for the water filter.

We reserve the right to make technical modifications.

It may be necessary to also observe additional country-specific regulations.

The customer's on-site electrical system must be designed to meet country-specific regulations per IEC 60364 and must match the information on the rating plate.

An isolated ground socket or a country-specific single-phase socket for single-phase connection, or a 5-pole CEE / CEKON socket per DIN EN 50310 VDE 0800-2-310 or a country-specific multi-pole socket for a three-phase connection, must be available near the machine. The sockets are part of the customer's on-site installation. The power cord must not come into contact with hot surfaces. If the power cord for this device is damaged then it must be replaced by our service personnel or a similarly qualified person, in order to prevent hazards.

In order to avoid possible faults from arising in our shielded data lines due to potential equalization currents between the devices, an additional potential equalization unit should be planned for devices connected to the vending system (see DIN EN 50310 VDE 0800-2-310).

If the machine is intended to be installed in a large kitchen, it is recommended that it be equipped with a ground potential bonding conductor. The potential equalization terminal is installed by WMF Service when needed.

	⚠ CAUTION
	Risk of fire and electric shock. Replace only with manufacturer's cord set, please see spare parts list.

Appendix: Accessories and spare parts

Number	Unit	Designation	Order No.	Model
Complete combi spout Choc				
1	Pcs	Complete combi spout	33 2867 5200	Basic Milk
1	Pcs	Complete combi spout	33 2867 5300	Basic Milk / Easy Milk
1	Meter	Milk hose	00 0048 4948	all
1	Pcs	Milk hose sleeve	33 2180 5000	Basic Milk / Easy Milk
1	Pcs	Milk hose spring 28	33 0190 3000	Basic Milk / Easy Milk
0.25	Meter	Mixer hose	00 0048 0064	Choc
1	Pcs	Mixer hose spring	33 2292 6000	Choc
1	Pcs	Mixer bowl	33 2895 4000	Choc
1	Pcs	Mixer wheel	33 2895 5000	Choc
1	Pcs	Milk nozzle for very cold milk (green)	33 2317 8000	Basic Milk
1	Pcs	Milk nozzle for chilled milk (white)	33 9516 9000	Basic Milk
1	Pcs	Milk nozzle for milk that is not chilled (caramel)	33 9521 3000	Basic Milk
1	Pcs	Milk nozzle (beige)	33 2046 0100	Basic Milk
Coffee grounds container				
1	Pcs	Coffee grounds container	33 2634 1200	all
1	Pcs	Sliding part for coffee grounds container	33 2633 9000	all
1	Pcs	Grounds container (grounds disposal through counter)	33 2634 1300	Constant water
1	Pcs	Slider (grounds disposal through counter)	33 2633 9100	Constant water
Constant water connection, drainage				
1	Pcs	Connecting tube for constant water connection	33 2292 1000	all
1	Pcs	Angle for drain tube	33 2165 8000	all
1.5	Meter	Drain tube	00 0048 0042	all
Accessories / tools				
1	Pcs	Multitool	33 2408 4000	all

Number	Unit	Designation	Order No.	Model
Complete bean hopper				
1	Pcs	Cover for bean hopper, center	33 2887 3099	all
1	Pcs	Cover for bean hopper, right / left	33 2925 5099	all
1	Pcs	Bean hopper, left	33 2913 2099	all
1	Pcs	Bean hopper, right	33 2911 8099	all
1	Pcs	Bean hopper, center	33 2946 8099	all
1	Pcs	Bean hopper / product hopper labels	33 2624 7000	all
Product hopper				
1	Pcs	Hopper cover, lockable, complete	33 2925 5000	Choc
1	Pcs	Powder hopper, large, single, complete	33 2911 7000	Choc
1	Pcs	Twin hopper	33 2911 9000	Choc
1	Pcs	Plug&Clean adapter	33 2427 5000	all
Brewing unit				
1	Pcs	Brewing unit	33 2893 0399	all
1	Pcs	O-ring, brewing unit	33 7006 5190	all
Drip tray / drip grid				
1	Pcs	Drip tray without SteamJet	33 2633 7000	without SteamJet
1	Pcs	Drip tray with SteamJet	33 2633 7100	with SteamJet
1	Pcs	Drip grid without SteamJet	33 2633 8000	without SteamJet
1	Pcs	Drip grid with SteamJet	33 2633 8100	with SteamJet
Water tank				
1	Pcs	Water tank	33 2886 7000	all
1	Pcs	Water tank lid	33 2635 6000	all
1	Pcs	Water tank sieve	33 7006 2608	all

Appendix: Accessories and spare parts

Number	Unit	Designation	Order No.	Model
Scale filter / water filter				
1	Pcs	Water filter AquaBasic M	03 9533 1000	Constant water
1	Pcs	Filter head (WMF AquaHead)	33 9532 0000	Constant water
1	Pcs	WMF AquaHead connection set	33 9532 1000	Constant water
1	Pcs	Adapter for the water filter in the water tank	33 2327 1000	Water tank
1	Pack	Replacement cartridge for the water filter in the water tank (4 pcs in package)	33 2332 2000	Water tank
Documentation and instructions				
1	Pcs	Set of documents: User Manual WMF 1500 S+	33 4186 1900	all
Order numbers for the WMF care program				
1	Bottle	WMF Special cleaner for milk foamer	33 0683 6000	all
1	Pack	Special cleaning tablets (100 pieces)	33 2332 4000	all
1	Pcs	Pipe cleaner	33 0350 0000	all
1	Pcs	Cleaning brush	33 1521 9000	all
1	Tube	WMF Molykote "gasket grease"	33 2179 9000	all
1	Pcs	Care kit	33 2888 2000	all
1	Pack	Special cleaning tablets	33 2622 0000	Easy Milk / Dynamic Milk
1	Pcs	Cleaning container	33 2593 6000	Easy Milk / Dynamic Milk
1	Pcs	Cleaning container lid	33 2593 7000	Easy Milk / Dynamic Milk

Index

A

Accessories and spare parts 134
 Accounting 64
 Accounting PIN 66
 Add cleaning agent (AutoClean) 97
 Additions 51
 Animations 47
 Antifreeze/transport preparation 76
 AutoClean cleaning cycle 69
 Automatic cup detection 23

B

Barista pad 23, 57
 Barista pad - coffee strength 43
 Basic Steam (optional) 32
 Bean hopper 23
 Bean hopper / powder hopper 35
 Beverage buttons 23, 42
 Beverage dispensing 30
 Beverage pre-selection 61
 Beverages 48
 Beverages: Font + color 74
 Bluetooth 76
 Button layout 60
 Button layout timer 69

C

Cancel beverage 30, 61
 Carbonate hardness 74
 Care 45, 63, 85
 Care safety instructions 85
 Change addition 52
 Change buttons 56
 Change recipes 51
 Cleaning intervals 87
 Cleaning PIN 66
 Cleaning programs 88
 CleanLock 46
 Clean the bean hopper 112
 Clean the brewing unit 104
 Clean the combi spout manually 108
 Clean the drip tray 107
 Clean the grounds container 104
 Clean the housing 108
 Clean the milk system manually 108
 Clean the mixer 111
 Clean the operating panel (CleanLock) 103
 Clean the Plug&Clean socket (AutoClean) 110
 Clean the powder hopper 113
 Clean the water tank 107
 Coffee cleaning granulate 97
 Coffee quality 53
 Combi spout with integrated milk foamer 23
 Comments on the recipe 54
 Conditions for use and installation 15
 Connect up the milk 28
 Cool milk 29
 Correction of spout position 78
 Counters 64

Cup&Cool 29
 Cup detection 78
 Cup detection (optional) 35
 Cup height tolerance 78
 Cup size 59
 Cup size adjustment 31, 43
 Cup volume 49, 59
 Cup volume S-M-L 49
 Cup warmer 23, 34
 Current recipe composition 51
 Customer cups 80
 Customer's logo 62

D

Daily timer overview 68
 Data back-up 84
 Daylight saving time 70
 Decaf 44
 Decaf factor 61
 Decrease display brightness 73
 Delete addition 52
 Delete timer 68
 Descaling 63, 98, 100, 102
 Descaling coffee machine with constant water connection 101
 Descaling container 23
 Digital solutions 81
 Directives 126
 Dispensing option 50
 Dispensing test 48
 Display and illumination 72
 Display background 73
 Display brightness 73
 Display for beverage buttons and settings 23
 Drip tray 38
 Drip tray sensor 38
 Duties of the owner / operator 128

E

Eco mode 70, 75, 82
 Error message 59
 Error messages and malfunctions 119
 Errors without error message 122
 Event display 73
 Export counters 83
 External accounting 64

F

FFC 52
 FFC filter change 46, 95
 Filter capacity 75
 Firmware update 84
 Foamer rinsing 94
 Foamer rinsing (Dynamic Milk) 94
 Freeflow 50
 Free of charge settings 65
 Fresh Filtered Coffee - FFC (optional) 23, 30
 Function bar 42
 Function bar "Ready to operate" display 40

Index

G

General safety instructions 5
Glossary 25
Grinding degree setting 76
Ground coffee quantity 52
Grounds container 23, 37
Grounds disposal through the counter (optional) 37

H

HACCP cleaning schedule 114
HACCP export 84
Hazards to the coffee machine 125
Hopper lock 23
Hot water dispensing 31
Hot water spout 23

I

Illumination 72
Information 63
Installation clearances 132
Installation surface 131
Instructions 47
Intended use 12
Intensive system cleaning (AutoClean) 46
Introduction 22
Inventory of factory additions 51

J

Journal 63

L

Language 81
Language pre-selection 59
Last brewing cycle 63
Load beverage symbols 83
Load data 84
Load language 84
Load recipes 48, 83
Lock recipes 48
Logo 62

M

Main menu functions 41
Maintenance 116
Maintenance and descaling 116
Manual cleaning 103
Manual insert 23, 36
Manufacturer's logo 62
Measured carbonate hardness 74
Measured total hardness 75
Menu control pads 41
Menu pad 23, 58
Messages and instructions 118
Messages for operation 118
Messages on the display 41
Milk container adapter 29
Milk foam dispensing 28
Milk nozzle 28
Milk or milk foam dispensing 28
Milk quantity 52

Milk storage temperature 71
Milk system cleaner 97
Milk system cleaning 45, 46, 93
Milk system cleaning overview 96
Milk system refill 43, 47, 60
Mixer rinsing 45, 95
Mode 79
Multiple brewing 50

N

Nominal power rating 131
No warranty is provided: 129
Nutritional information 42, 58, 77

O

ON/OFF switch 23
Operating elements 57
Operating options 57
Operating panel 23
Operation 26
Operation safety instructions 26
Optional pads 31
Overview 40

P

Parts of the coffee machine 22
PIN rights 65
PostSelection 60
Powder hopper (optional) 23
Preparation of ground coffee using the manual insert 36
Preparing the milk system after cleaning 47
Pre-selection pads (optional) 31
Progress display 72

Q

Quality level 53

R

Rapid rinsing (AutoClean) 92
Ready to operate 40
"Ready to operate" display 23, 42
Re-enter PIN 66
Remote actions 81
Removable drip tray with drip grid 23
Rinsing 101, 103

S

Safety 5
Safety devices 5
Save recipes 83
Save recipes as pdf file 83
Second type of coffee 44
Select coffee grinder 54
Self-service 57
Self-service mode 57
Service 63
Set the cup height manually 55
Set timer switching times 68
Settings 47
Settings PIN 66

Side illumination 23
Size setting S-M-L 79
Smart Remote 81
S-M-L Function 49, 77
Software 40
Start-Stop 50
Start-Stop-Freeflow 50
Steam button 44
SteamJet 23, 58
SteamJet pad 23, 34, 42
Steam outlet 23
Switch off 39
Switch off rinsing 47
Switch on the coffee machine 28
Syrup (optional) 77
System 71
System cleaning 45, 88, 91, 92

T

Tablet insert 23
Technical data 130
Technical data for coffee machine 130
Temperature 75
Text and picture 54
Time/date 67

Timer 63, 67
Timer overview and setting the timer 67
Time zone 70
Total hardness 75
Touch display calibration 73

U

USB 83
User Manual Signs and Symbols 24
User Manual Symbols 24

V

Vending machines 64

W

"Warm rinse" pad 23, 42, 58
Warranty claims 129
Water filter 63, 74
Water quality 130
Water quantity 52
Water supply 130
Water tank 23
WMF Service 117

Your nearest WMF Service:

© 2018–2021 WMF GmbH

All rights reserved, in particular duplication, distribution and translation rights. No part of this manual may be reproduced in any form or processed, duplicated or distributed using electronic systems without written consent.

Design and production / typesetting and print presentation:
TecDoc GmbH; Geislingen, info@tecdogmbh.de
Original User Manual. Printed in Germany.

We reserve the right to make technical modifications.
16.02.2022



DESIGNED TO PERFORM